

One Technology Way • P.O. Box 9106 • Norwood, MA 02062-9106, U.S.A. • Tel: 781.329.4700 • Fax: 781.461.3113 • www.analog.com

# Evaluating the AD7175-2 24-Bit, 250 kSPS, Sigma-Delta ADC with 20 μs Settling and Integrated Analog Input Buffers

#### **FEATURES**

Full featured evaluation board for the AD7175-2 PC control in conjunction with the Analog Devices, Inc., EVAL-SDP-CB1Z system demonstration platform (SDP)

PC software for control and data analysis (time domain) Standalone capability

# **EVALUATION KIT CONTENTS**

EVAL-AD7175-2SDZ evaluation board AD717x Eval+ software CD 7 V to 9 V ac-to-dc adapter Plastic screw washer set

#### **EQUIPMENT NEEDED**

DC signal source PC running Windows® XP to Windows 10

# **GENERAL DESCRIPTION**

The EVAL-AD7175-2SDZ evaluation kit features the AD7175-2, a 24-bit, 250 kSPS analog-to-digital converter (ADC) with integrated rail-to rail-analog input buffers, on-board power supply regulation, and an external amplifier section for amplifier evaluation. A 7 V to 9 V ac-to-dc adapter is regulated to 5 V and 3.3 V, which supply the AD7175-2 and support components. The EVAL-AD7175-2SDZ evaluation board connects to the USB port of a PC via the EVAL-SDP-CB1Z (SDP-B) controller board.

The AD717x Eval+ software fully configures the AD7175-2 device functionality via an interactive block diagram and a user accessible register interface and provides dc time domain analysis in the form of waveform graphs, histograms, and associated noise analysis for ADC performance evaluation.

Full specifications for the AD7175-2 are available in the product data sheet, which should be consulted in conjunction with this user guide when using the evaluation board.

2528-001



# **FUNCTIONAL BLOCK DIAGRAM**

# TABLE OF CONTENTS

Features 1
Evaluation Kit Contents
Equipment Needed 1
General Description
Functional Block Diagram1
Revision History
EVAL-AD7175-2SDZ Quick Start Guide
Recommended Quick Start Guide 3
Quick Start Noise Test
Evaluation Board Hardware 4
Device Description
Hardware Link Options4
Sockets and Connectors 5
Serial Interface
Power Supplies6
Power Supply Configurations7
Analog Inputs7
REVISION HISTORY

### 1/2018—Rev. A to Rev. B

Changed EVAL-SDP-CB1Z to SDP-B Throughout
Changed AD7175-2 Eval+ to AD717x Eval+ Throughout
Changes to Evaluation Kit Contents Section, Equipment
Needed Section, and General Description Section 1
Changes to Table 1 4
Changes to Table 2
Changes to Power Supply Configuration Section7
Changes to Software Installation Section, Figure 3, Figure 3
Caption, Figure 4, and Figure 4 Caption
Added Figure 5 and Figure 6; Renumbered Sequentially
Added Figure 7 through Figure 119
Added Setting Up the System for Data Capture Section 10
Added Figure 13 and Figure 14 10
Changes to Launching the Software Section, Figure 12, Figure 12
Caption, Figure 15, and Figure 15 Caption 10
Changed to Software Operation Section to Evaluation Board
Software Operation Section11
Changes to Figure 1611
Changes to Figure 1712
Changes to Overview of the Main Window Section and
Configuration Tab (1) Section 12
Changes to Waveform Tab (18) Section 14
Changes to Figure 18 and Figure 18 Caption 15
Changes to Histogram Tab (26) Section, Figure 19, and Figure
19 Caption
Changed Calculated Performance Tab (29) Section to Modelled
Performance Tab (31) Section
Changes to Modelled Performance Tab (31) Section, Figure 20,
and Figure 20 Caption
Added Figure 21
Added Figure 22

EVAL-AD7	175-2SDZ	<b>User Guide</b>
----------	----------	-------------------

Reference Options	7
Evaluation Board Software	8
Software Installation	8
Setting up the System for Data Capture	10
Launching the Software	10
Evaluation Board Software Operation	11
Overview of the Main Window	12
Configuration Tab (1)	12
Waveform Tab (18)	14
Histogram Tab (28)	
Modelled Performance Tab (31)	17
Registers Tab (45)	
Exiting the Software	
Evaluation Board Schematics and Artwork	
Ordering Information	29
Bill of Materials	

Changed Register Map Tab (34) Section to Registers Tab (45)	
Section	20
Changes to Registers Tab (45) Section and Figure 23	20
Added Evaluation Board Schematics and Artwork Section	21
Added Ordering Information Section and Table 4	29

#### 6/2015-Rev. 0 to Rev. A

Changed Evaluation Software to Eval+ Software Throughout
Changes to Evaluation Kit Contents Section, General Description
Section, and Figure 11
Changes to Quick Start Noise Test Section and Figure 23
Changes to Table 14
Changes to Table 36
Changes to Single Supply (Unregulated) Section, Split Supply
(Regulated) Section, and Split Supply (Unregulated) Section7
Changes to Evaluation Board Software Section
Changes to Overview of the Main Window Section9
Added Evaluation Mode (2) Section, Analog Supply Voltage
(9 and 13) Section, Digital Supply Voltage (10) Section, Analog
Input Voltage (11) Section, External SCLK Frequency (12)
Section, and External MCLK Frequency (14) Section9
Changes to Figure 7 10
Added Figure 8; Renumbered Sequentially 11
Changes to Figure 9 13
Changes to Figure 1014
Added Calculated Performance Tab (29) Section, Filter Profile
and Response (30 and 31) Section, Performance Summary (32)
Section, Timing Diagram (33) Section, and Figure 1115
Changes to Figure 12 16

11/2014—Revision 0: Initial Version

# EVAL-AD7175-2SDZ QUICK START GUIDE RECOMMENDED QUICK START GUIDE

Follow these steps to set up the evaluation board:

- Disconnect the SDP-B board from the USB port of the PC. Install the AD717x Eval+ software from the enclosed CD. Restart the PC after installation.
- 2. Connect the SDP-B board to the evaluation board, as shown in Figure 2.
- 3. Fasten the two boards together with the enclosed plastic screw washer set.
- 4. Connect the external 9 V power supply to Connector J5 of the evaluation board as shown in Figure 2. Set Link LK2 to Position B.
- Connect the SDP-B board to the PC via the USB cable. For Windows XP, search for the SDP-B drivers. Choose to automatically search for the drivers for the SDP-B board if prompted by the operating system.
- 6. Launch the AD717x Eval+ software from the **Analog Devices** subfolder in the **Programs** menu.

# QUICK START NOISE TEST

Use the following procedure to quickly test the noise performance:

- 1. Insert Link LK8 to Link LK12 to initiate the noise performance test mode. In this mode, analog input channels short to the REFOUT pin.
- 2. Click **Start Sampling** to acquire samples from the ADC (see Figure 16).

The **Samples** numeric control in the top right corner of the main window sets the number of samples collected in each batch (see Figure 16).



Figure 2. Hardware Configuration, Setting Up the EVAL-AD7175-2SDZ Evaluation Board

# **EVALUATION BOARD HARDWARE** DEVICE DESCRIPTION

The AD7175-2 is a highly accurate, high resolution, multiplexed, 2-/4-channel (fully differential/single-ended)  $\Sigma$ - $\Delta$  ADC. The AD7175-2 has a maximum channel-to-channel scan rate of 50 kSPS (20 µs) for fully settled data. The output data rates range from 5 SPS to 250 kSPS. The device includes integrated rail-to-rail analog input and reference input buffers, an integrated precision 2.5 V reference, and an integrated oscillator.

See the AD7175-2 data sheet for complete specifications. Consult the data sheet in conjunction with this user guide when using the evaluation board. Full details for the SDP-B are available at the SDP-B product page on the Analog Devices website.

# HARDWARE LINK OPTIONS

See Table 1 for default link options. By default, the evaluation board is configured to operate from the supplied 9 V ac-to-dc adapter connected to connector J5. The 5 V supply required for the AD7175-2 comes from the ADP7118 on-board low dropout regulator (LDO). The ADP7118, with a 5 V output voltage, receives its input voltage from J3 or J5 (depending on the position of LK2) and generates a 5 V output.

Link	Default Option	Description
LK1	A	Selects the voltage applied to the power supply sequencer circuit (U3); dependent on AVDD1. Place in Position A if using 5 V AVDD1, or Position B if using 2.5 V AVDD1.
LK2	В	Selects the external power supply from Connector J3 (Position A) or Connector J5 (Position B).
LK3 to LK7	Not inserted	Prior to inserting SL8 to SL11, insert these links sets up the on-board noise test to short the inputs to the on- board amplifiers, U8 and U9. In this mode, all inputs short to REFOUT.
LK8 to LK12	Inserted	Inserting these links sets up the on-board noise test close to the ADC analog inputs. In this mode, all inputs short to REFOUT.
SL1	A	Sets the voltage applied to the AVDD2 pin. Operates using the AVDD1 supply (default). Position B sets the AVDD2 voltage to 3.3 V supply from the ADP7118 (3.3 V) (U10) regulator.
SL2	A	Selects between an external (Position B) or on-board AVDD1 source (Position A). Supplies AVDD1 from the ADP7118 (5 V) (U7) (default).
SL3	A	Selects between an external (Position B) or on-board AVSS (Position A) source. Supplies AVSS from the ADP7182 (-2.5 V) (U4) (default).
SL4	С	Connects AIN4 to: A4/J6 (Position A), REFOUT pin on the AD7175-2 (Position B), or AVSS (Position C). Position B and Position C are used to simplify using a single-ended input source.
SL5	В	Selects between an external or on-board IOVDD source. Supplies IOVDD from the ADP7118 (3.3 V) (U10) (default). The evaluation board operates with a 3.3 V logic.
SL8	А	Routes A0 to: AIN0 pin on the AD7175-2 (Position A), Buffer/In-amp U8 (Position B), Funnel Amp U9 with gain of 0.8× (Position C), or J10-1 (Position D).
SL9	А	Routes A2 to: AIN2 pin on the AD7175-2 (Position A), Buffer U12 (Position B), or Funnel Amp U9 gain of $0.4 \times$ (Position C).
SL10	А	Routes A3 to: AIN3 pin on the AD7175-2 (Position A), Buffer U12 (Position B), or Funnel Amp U9 gain of $0.4 \times$ (Position C).
SL11	А	Routes A1 to: AIN1 pin on the AD7175-2 (Position A), Buffer/In-amp U8 (Position B), Funnel Amp U9 with gain of 0.8× (Position C), or J10-7 (Position D).
G16	Inserted	Sets the on board in-amp (U8) to a gain of 16. Insert only one of G16, G32, G64, and G128 at a time.
G32	Not inserted	Sets the on-board in-amp (U8) to a gain of 32. Insert only one of G16, G32, G64, and G128 at a time.
G64	Not inserted	Sets the on-board in-amp (U8) to a gain of 64. Insert only one of G16, G32, G64, and G128 at a time.
G128	Not inserted	Sets the on-board in-amp (U8) to a gain of 128. Insert only one of G16, G32, G64, and G128 at a time.
R49 to R51	Inserted	Connects AVSS and AGND for single-supply operation. To operate in split supply mode, remove these links.

#### Table 1. Default Link and Solder Link Options

# SOCKETS AND CONNECTORS

# Table 2. Connector Details

				Manufacturer	
Connector	Function	Connector Type	Manufacturer	Number	Order Code <sup>1</sup>
J1	Connector to the SDP-B	120-way connector, 0.6 mm pitch	Hirose	FX8-120S-SV(21)	FEC1324660
J2	External MCLK input	Straight PCB mount SMB/SMA jack	TE Connectivity	1-1337482-0	Not applicable
J3	External bench top voltage supply for the EVAL-AD7175-2SDZ	Power socket block, 3-pin, 3.81 mm pitch	Phoenix Contact	MC 1,5/ 3-G-3,81	FEC3704737
J5	External ac-to-dc adapter input for the EVAL-AD7175-2SDZ, 7 V to 9 V	DC power connectors, 2 mm SMT power jack	Kycon	KLDX-SMT2- 0202-A	MOUSER 806- KLDX-SMT20202A
J6	Analog input terminal block; wired connection to external source or sensor	Power socket block, 8-pin, 3.81 mm pitch	Phoenix Contact	MC 1,5/ 8-G-3,81	FEC3704774
9	External bench top voltage supply option for AVDD1/AVDD2, IOVDD, and AVSS inputs on the AD7175-2	Screw terminal block, 3.81 mm pitch	Phoenix Contact	MKDS 1/4-3.81	FEC3704592
J10	Optional header	7-way, 2.54 mm pin header	Samtec	SSW-107-01-T-S	FEC1803478
J13	Optional header	7-way, 2.54 mm socket	Samtec	TLW-107-05-G-S	FEC1668499
A0 to A4	Analog inputs to ADC	Straight PCB mount SMB/SMA jack	TE Connectivity	1-1337482-0	Not applicable
A7	PMOD-compatible header	6-Pin SIL header (0.1" pitch)	Harwin	20-9990646	FEC 1022255

<sup>1</sup> Order codes starting with FEC are for Farnell.

# SERIAL INTERFACE

The EVAL-AD7175-2SDZ evaluation board connects via the serial peripheral interface (SPI) to the Blackfin\* ADSP-BF527 on the SDP-B. There are four primary signals:  $\overline{CS}$ , SCLK, and DIN (all inputs), and one output from the ADC, DOUT/RDY.

To operate the evaluation board in standalone mode, disconnect the evaluation board from the SDP-B controller board. Use the test points to connect the signals to an alternative digital capture setup or the PMOD-compatible header (A7).

# **POWER SUPPLIES**

Power the evaluation board from the ac-to-dc adapter connected to J5, or from an external bench top supply applied to J3 or J9. Linear LDOs generate the required voltages from the applied input voltage ( $V_{IN}$ ) rail when using J3 or J5. Use J9 to bypass the on-board regulators. An ADP7118 regulator generates the 5 V (single supply) and 2.5 V (split supply) supplies for the AVDD1 and AVDD2 rails to the ADC; a second ADP7118 generates 3.3 V for the IOVDD rail. The ADP7104 supplies 5 V for the SDP-B controller board as well as 5 V for the ADM660 voltage converter to generate –5 V to supply the ADP7182. The ADP7182 generates the –2.5 V supply for AVSS when operating in split supply mode. Each supply is decoupled where it enters the board and again at each device in accordance with the schematic. Table 3 shows the various power supply configurations available, including split supply operation.

Table 3. Power Supply Configurations<sup>1</sup>

		-
Configuration	Input Voltage Range	Description
Single Supply (Regulated)	7 V to 9 V	The 7 V to 9 V input is regulated to 5 V for AVDD1/AVDD2 and 3.3 V for IOVDD. This also powers the external 5 V reference. See the Single Supply (Regulated) section in the Power Supply Configurations section.
Single Supply (Unregulated)	7 V to 9 V, 5 V, and 3.3 V	The input is unregulated and connects directly to AVDD1/AVDD2 and IOVDD from J5. The 7 V to 9 V input powers the external 5 V reference. See the Single Supply (Unregulated) section in the Power Supply Configurations section.
Split Supply (Regulated)	7 V to 9 V	The 7 V to 9 V input is regulated to 2.5 V for AVDD1/AVDD2, –2.5 V for AVSS, and 3.3 V for IOVDD. The 7 V to 9 V input powers the external 5 V reference, See the Split Supply (Regulated) section in the Power Supply Configurations section.
Split Supply (Unregulated)	7 V to 9 V, ±2.5 V, and 3.3 V	The input is unregulated and connects directly to AVDD1/AVDD2 and IOVDD from J5. The 7 V to 9 V input powers the external 5 V reference. See the Split Supply (Unregulated) section in the Power Supply Configurations section.

<sup>1</sup> Only one configuration can be used at a time.

## Single Supply (Regulated)

There are two available power supply options for the single supply (regulated) configuration.

- An ac-to-dc adapter (included) connected to J5. Set LK2 to Position B.
- A bench top power supply connected to J3. Set LK2 to Position A, and ensure that AVSS = AGND = 0 V.

Set all other links and solder links to the default settings as outlined in Table 1.

## Single Supply (Unregulated)

To set up the evaluation board, use the following procedure:

- 1. Move SL2 to Position B and SL5 to Position A.
- 3. Connect the two terminals of J9 labeled AGND and AVSS.
- 4. Connect 0 V (GND) to J9 at the terminal labeled AGND.
- 5. Connect 5 V to J9 at the terminal labeled AVDD.
- 6. Connect 3.3 V to J9 at the terminal labeled IOVDD.
- 7. Connect the 7 V to 9 V input to J5.

Set all other links and solder links to the default settings as outlined in Table 1.

## Split Supply (Regulated)

To set up the evaluation board, use the following procedure:

- 1. Remove R49 to R52. These links connect AVSS to AGND.
- 2. Insert a 0  $\Omega$  resistor for R67 and R85.
- 3. Set LK1 to Position B, which sets the input to the power monitor circuitry to work with the lower AVDD1 supply of 2.5 V.
- 4. Connect a bench top power supply to J5 and set LK2 to Position B.

Set all other links and solder links to the default settings as outlined in Table 1.

## Split Supply (Unregulated)

To set up the evaluation board, use the following procedure:

- 1. Move SL2, SL3 to Position B and SL5 to Position A.
- 2. Remove R49 to R52.
- 3. Insert a 0  $\Omega$  resistor at R67 and R 85.
- 4. Connect 0 V (GND) to J9 at the terminal labeled AGND.
- 5. Connect 2.5 V to J9 at the terminal labeled AVDD.
- 6. Connect –2.5 V to J9 at the terminal labeled AVSS.
- 7. Connect 3.3 V to J9 at the terminal labeled IOVDD.
- 8. Connect 7 V to 9 V to J5.
- 9. Set LK1 to Position B. This sets the input to the power monitor circuitry to work with the lower AVDD1 supply of 2.5 V.

Set all other links and solder links set to the default settings as outlined in Table 1.

# **ANALOG INPUTS**

The primary analog inputs of the EVAL-AD7175-2SDZ evaluation board can be applied in two separate ways.

- J6 connector on the left side of the board
- A0 to A4 SMB/SMA footprints on the evaluation board

The analog inputs route directly to the associated analog input pins on the AD7175-2, provided that the LK5 to LK9 links (on-board noise test) are removed. The AD717x Eval+ software is set up to analyze dc inputs to the ADC. The AD7175-2 input buffers work for dc input signals.

# **REFERENCE OPTIONS**

The EVAL-AD7175-2SDZ evaluation board includes an external 5 V reference, the ADR445. The AD7175-2 includes an internal 2.5 V reference. The default operation is to use the external reference input, which is set to accept the 5 V ADR445 on the evaluation board.

# **EVALUATION BOARD SOFTWARE** SOFTWARE INSTALLATION

The EVAL-AD7175-2SDZ evaluation kit includes software on a CD. Double-click the **setup.exe** file from the CD to run the installer. The default installation location for the software is **C:\Program Files\Analog Devices\AD717x Eval+**\.

Install the AD717x Eval+ software before connecting the evaluation board and SDP-B board to the USB port of the PC to ensure that the evaluation system is correctly recognized when connected to the PC.

There are two parts to the installation.

- 1. AD717x Eval+ software installation.
- 2. AD717x Eval+ Dependencies
  - a. SDP-B board drivers
  - b. Ssrc SVG plug-in installation
  - c. Microsoft .Net Framework v3.5

#### Warning

To ensure the PC correctly recognizes the evaluation system, the evaluation software drivers must be installed before connecting the EVAL-AD7175-2SDZ evaluation board and SDP-B boards to the USB port of the PC.

#### Installing the AD717x Eval+ Software

To install the AD717x Eval+ software take the following steps:

- 1. With the SDP-B disconnected from the USB port of the PC, insert the AD717x Eval+ software installation CD into the CD-ROM drive. Double-click the **setup.exe** file to begin the evaluation board software installation.
- 2. The default installation location for the software is C:\Program Files\Analog Devices\AD717x Eval+\.
- 3. A dialog box appears asking for permission to allow the program to make changes to the PC. Click **Yes** to proceed (see Figure 3).

	Send Feedback
to allow the follow blisher to make cha	ing program from an nges to this computer?
setup.exe <b>Unknown</b> CD/DVD drive	
	Yes No
<u>Change</u>	when these notifications appear
	to allow the follow blisher to make cha setup.exe <b>Unknown</b> CD/DVD drive <u>Change</u>

Figure 3. User Account Control Permission Dialog Box

 Select a location to install the software and click Next. Figure 4 shows the default locations displayed when the dialog box opens. To select another location click Browse.

Destination Directory			Д
Select the primary installation directory.			
All software will be installed in the following locations: location, click the Browse button and select another c	. To install software into a lirectory.	different	
Directory for AD717x_Eval+ [C\Program Files (x86)\Analog Devices\AD717x Eval+	Browse		
Directory for National Instruments products	Brown		
Tel Le Ren Line (ne l'acht eine in ne annual			

Figure 4. **AD717x Eval+** Installation, Selecting the Location for Software Installation

5. A license agreement appears. Read the agreement, select I accept the License Agreement, and click Next.

License Agreement		·
You must accept the licenses	displayed below to proceed.	
EVALUATIO	N SOFTWARE LICENSE AGREEMENT 20160622-AD71E-CTELA	▲ Ⅲ
Analog Devices, Inc. a Massachus Norwood, Massachusetts, USA 02 license the software and related purposes from the Analog Device behalf of your employer, as appl AAREEMENT ("License" or "Agre EMPLOYER TO ITS TERMS. Any of this License is unlicensed and laws.	etts corporation, with principal offices at One Technology 062 and its licensors (together 'Analog Devices') are with documentation made available for download for eval s web site (the 'Licensed' Software') to you (personally licable) ('Licensee') ONLY IF YOU ACCEPT THIS LICI ement') SO AS TO BIND YOURSELF PERSONALLY OR ' use of the Licensed Software other than pursuant to the a violation of applicable copyright and other intellectual pro-	Way, ling to uation or on ENSE YOUR terms operty
BEFORE YOU CHOOSE THE "I	ACCEPT" BUTTON AT THE BOTTOM OF THIS WINE	DOW, -
	<ul> <li>I accept the License Agreement,</li> </ul>	
	I do not accept the License Agreement.	
	C C C C	ancel

Figure 5. AD717x Eval+ Installation, Accepting the License Agreement

02

2528-

6. A summary of the installation displays. Click **Next** to continue.

JJ AD717x_Eval+	
Start Installation Review the following summary before continuing.	
Adding or Changing • AD/17x_Evol+ Files	
I Click the Next button to begin installation. Click the Back button to change the installation settings.	
Save File) <<> Back Next>>	Cancel

Figure 6. **AD717x Eval+** Installation, Reviewing a Summary of the Installation

2528-003

7. The message in Figure 7 appears when the installation is complete.

I AD717x_Eval+			- • •
Installation Complete			
The insteller has finished updating your system.			
	<< Back	Next >>	Finish

Figure 7. AD717x Eval+ Installation Complete

#### Installing the Eval+ Dependencies

After installation of the evaluation software is complete, a welcome window displays to install the **Eval**+ **Dependencies**.

1. With the SDP-B board still disconnected from the USB port of the PC, make sure all other applications are closed, then click **Install**.



Figure 8. Eval+ Dependencies Setup, Beginning the Drivers Installation

- 2. The Ssrc SVG plug-in will install first, then the SDP-B drivers, and finally the .Net Framework.
- 3. If using Windows 8 or Windows 10 see the Installing the .Net Framework v3.5 on Windows 8 and Windows 10 section.
- 4. To complete the drivers installation click **Close**. This closes the installation setup wizard.



Figure 9. Eval+ Dependencies Setup, Completing the Driver Setup Wizard

5. Before using the evaluation board, the user must restart the PC.

Y	If you need to install	hardware now, shut down	the computer. If you	
	choose to restart late software.	er, restart your computer be	efore running any of this	
		0.40		

Figure 10. Restarting the PC

# Installing the .Net Framework v3.5 on Windows 8 and Windows 10

Windows 8 and Windows 10 have a built in installer for the .Net Framework v3.5. In order to run this software the user will need an internet connection and may need administrator privileges. Complete the following steps to install the software. If unable to install the .Net Framework contact your system administrator.

1. When the Eval+ Dependencies installer reaches the .Net Framework, the window shown in Figure 11 will appear.

		×	
~	💽 Windows Features		
	An app on your PC needs the following Windows feature:		
	.NET Framework 3.5 (includes .NET 2.0 and 3.0)		
	<b>^</b>		
	Download and install this feature Windows will get the files that it needs from Windows Update and complete the installation.		
	→ Skip this installation Your apps might not work correctly without this feature.		
	Tell me more about this feature		-
		Cancel	2528-21
_			÷

Figure 11. Restarting the PC

2. Follow the steps in the installation wizard to complete the installation.

# UG-741

# UG-741

 If the window in Figure 11 does not appear; v3.5 may already be installed. To check if the software is already installed open Control Panel > Programs > Programs and Features and select Turn Windows features on or off. Check that the .Net Framework v3.5 is enabled.

# SETTING UP THE SYSTEM FOR DATA CAPTURE

After completing the steps in the Software Installation section and the Evaluation Board Hardware section, set up the system for data capture using the following steps.

- 1. Allow the **Found New Hardware Wizard** to run after the SDP-B board is connected to the PC. (If using Windows XP, search for the SDP-B drivers. Choose to automatically search for the drivers if prompted by the operating system.)
- 2. Check that the board is connecting to the PC correctly using the **Device Manager**.
- Access the Device Manager by right clicking My Computer, then Manage. A dialog box appears asking for permission to allow the program to make changes to the PC. Click Yes. The Computer Management box appears. Click Device Manager from the list of System Tools (see Figure 12).
- 4. The SDP-B board appears under **ADI Development Tools**. This indicates that the driver software has installed and the board is connected to the PC correctly.

<u>File Action View H</u> elp	
🖕 🤿   🙍 📰 🔯 👘	
Computer Management (Local System Tools Carabian Carabia	ADI Development Tools     ADI Development Tools     Analog Devices System Development Platform (32MB)     Disk drives     Disk drives     Disk drives
Bevice Manager     Storage     Disk Management     Services and Applications	Berger Human Interface Devices     Berger Human Interface Devices

Figure 12. Device Manager, Checking the Board Connected to the PC Correctly

# LAUNCHING THE SOFTWARE

After completing the steps in the Setting up the System for Data Capture section, launch the AD717x Eval+ software using the following steps:

- From the Start menu, click Programs > Analog Devices > AD717x Eval+.
- The dialog box in Figure 13 appears, select AD7175 Evaluation Board. The main window of the software box displays as shown in Figure 16.

Select Interface			×	
Select Evaluation Hardwa	are:			
AD7175-2 Evaluation Board		*	Refresh	
		-	Identify	
Simulation	Select			12528-006

Figure 13. AD7175-2 Evaluation Board Selection

 If the EVAL-AD7175-2SDZ evaluation system is not connected to the USB port via the SDP-B, when the software is launched the Select Interface dialog box appears (see Figure 14). Connect the evaluation board to the USB port of the PC, wait a few seconds, click Refresh and the option shown in Figure 13 appears.

Select Interface			×
Select Evaluation Hards	ware:		
No Supported Evaluation B	oards Found	*	Refresh
		_	Identify
	Calast	-	
Simulation	Select		

Figure 14. Evaluation Board Selection, No Board Connected

4. The AD717x Eval+ software can also be used without connecting hardware. Click the **Simulation** button and the options shown in Figure 15 appear. The simulation mode uses a model and allows the AD7172-2, AD7172-4, AD7173-8, AD7175-2, AD7175-8, AD7176-2, or AD7177-2 to be evaluated.

	Select Interface		×	
:	Select Product to Simulate:			
[	AD7173-8	*		
	AD7175-2			
	AD7175-8	=		
	AD7176-2	-		
L				
	Cancel	Select		5
				528-1
				÷-

Figure 15. Evaluation Board Selection Simulation

# EVAL-AD7175-2SDZ User Guide

# **EVALUATION BOARD SOFTWARE OPERATION**



Figure 16. **Configuration** Tab of the AD7175-2 Eval+ Software in Hardware Mode



Figure 17. **Configuration** Tab of the AD7175-2 Eval+ Software in Simulation Mode

# **OVERVIEW OF THE MAIN WINDOW**

The main window of the AD717x Eval+ software displays the significant control buttons and analysis indicators of the AD717x Eval+ software. The main window is divided into five tabs.

- Configuration
- Waveform
- Histogram
- Modelled Performance
- Registers

# **CONFIGURATION TAB (1)**

Figure 16 shows the **Configuration** tab when **Hardware Mode** is selected and Figure 17 shows the **Configuration** tab when **Simulation** mode is selected. The controls highlighted in Figure 17 are only available in **Simulation** mode.

# Evaluation Mode (2)

The Evaluation Mode indicator displays the current evaluation mode. To switch between modes, click the **Select Product** button and the dialog box shown in Figure 13 appears.

# Tutorial Button (3)

Click the tutorial button to open a tutorial and access additional information on using the AD717x Eval+ software.

# Functional Block Diagram (4)

The functional block diagram of the ADC shows each of the separate functional blocks within the ADC. Clicking a configuration pop-up button on any of the functional blocks opens the configuration pop-up window for the block selected. Not all blocks have a configuration button.

# Configuration Pop-up Button (5)

Each configuration pop-up button opens a different window that allows the configuration of the relevant functional block.

# Analog and Digital Supply Voltage (6, 7, and 14)

These input fields are used to take the supply voltage levels selected for the AD7175-2. Checks are performed to ensure the power supply voltage levels entered are within the specified limits. These power supply voltage levels are also used for the modelled performance to calculate the power dissipation.

The **Ext. REF** input fields set the positive and negative external reference voltage values. The difference is used for calculating the results for both the **Waveform** and **Histogram** tabs. The evaluation board has an external 5 V ADR445 reference, which can be bypassed by removing R32. Change the external reference values in **Ext. REF** to ensure correct calculation of results in the **Waveform** and **Histogram** tabs.

#### **Register Configuration Summary(9)**

Click the **Summary** button to display the selected configuration of the AD7175-2, this includes the channel configuration, information on each of the individual steps, and information on any error present.

#### Reset ADC (10)

Click the **Reset ADC** button to perform a software reset of the AD7175-2. The AD7175-2 does not have a hardware reset pin, to perform a hard reset the power must be removed from the board. The software reset has the same effect as a hard reset.

#### Menu Bar (11)

The menu bar has three section: File, Edit, and Help.

#### File

There are three options available in the **File** drop-down menu: Save, Load, and Generate.

#### Save

Save allows the user to save register configurations or waveform data. Register configurations can be saved as a JSON file or a header file. If the configuration is only used in the AD717x Eval+ software environment then it is recommended to use the JSON setting. Waveforms are saved as .csv files and the user is prompted to save the register configuration as well.

#### Load

Load allows the user to load saved register configurations or waveform data. In order to load a header into AD717x Eval+ it must be in the same format as one that is saved from AD717x Eval+. The header file can be used when developing firmware. When loading the waveform data the user is prompted to load the register configuration. This allows the software to correctly analyze the data.

#### Edit

There are two options in the **Edit** drop-down menu; Change Product Selection and Reset ADC. Change Product Selection performs the same action as the **Select Product** button and Reset ADC performs the same action as the **Reset ADC** button.

# Help

The **Help** drop-down menu provides links to extra information about the AD7175-2, which includes links to the AD7175-2 product page, EVAL-AD7175-2SDZ evaluation board user guide, AD7175-2 datasheet, and No-OS Drivers. Selecting the AD717x Eval+ Tutorial opens the tutorial outlined in the Tutorial Button (3) section. For details on the current version of the software the **About** option opens a dialog box displaying the current version of the software and relevant licenses.

## Status Bar (12)

The status bar displays the busy indicator and status updates, such as **Analysis Completed** and **Reset Completed** during software use.

## Device Error (13)

The Device Error LED icon illuminates when an ADC error is detected or when a cyclic redundancy check (CRC) error occurs. The CRC functionality on the AD7175-2 is disabled by default and must be enabled for the Device Error indicator to work. Specific information on the error can be found in the Register Configuration Summary(9) section.

#### External MCLK Frequency (15)

This field sets the external MCLK frequency. The External MCLK Frequency (15) is only visible on the front panel when an external clock source is selected by the ADC. The External MCLK Frequency (15) is used by the functional model for modelled performance.

#### Analog Input Voltage (16)

These fields are only available when simulation mode is selected. These inputs allow the analog input voltages to be set and can be changed at any time while in simulation mode.

#### External SCLK Frequency (17)

This input field sets the external SCLK frequency for the SPI interface. This field is only available in simulation mode to determine if the SCLK frequency is within the permitted range.

# WAVEFORM TAB (18)

Figure 18 shows the **Waveform** tab of the AD717x Eval+ software.

## Sampling Mode (19)

This control is unrelated to ADC mode. The user can capture a defined sample set, single capture; or continuously gather batches of samples, repeated capture. The user can also select data logging that runs similar to repeated capture, but posts the results to a .csv file. When saving, the .csv file prompts the user to save the register configuration. This is necessary to load the data back into the software for analysis.

## Samples (20)

The Samples field control sets the number of samples gathered per batch. Single capture returns the number enters into the Samples control. Repeated capture keeps returning batches of the number entered into the Samples control until stopped by the user.

## Sample (21)

Click the **Sample** button to start gathering ADC results. Results appear in the waveform graph (22). See Figure 18.

## Waveform Graph and Controls (22 and 23)

The data waveform graph shows each successive sample of the ADC output. Zoom in on the data using the control toolbar (labeled 23 in Figure 18). Click the x-axis and y-axis to change the scales on the graph.

# Channel Selection (24)

The channel selection control allows the user to choose which channels display on the data waveform graph (23). These controls only affect the display of the channels and have no effect on the channel settings in the ADC register map.

#### Noise Analysis (25)

The **Noise Analysis** section displays the results of the noise analysis for the selected analysis channel, which includes both noise and resolution measurements.

## Analysis Channel (26)

The **Noise Analysis** section and histogram graph show the analysis of the channel selected via the **Analysis Control** drop-down menu.

# Display Units and Axis Controls (27)

The **Display Units** control affects both the waveform graph and the histogram graph. Click the **Display Units** drop-down menu to select the unit displayed in the graph. The axis controls can be switched between dynamic and fixed. When dynamic is selected, the axis automatically adjusts to show the entire range of the ADC results after each batch of samples. When fixed is selected, the user can program the axis ranges; the axis ranges do not automatically adjust after each batch of samples.



Figure 18. Waveform Tab of the AD7175-2 Evaluation Software

# **HISTOGRAM TAB (28)**

Figure 19 shows the **Histogram** tab of the AD717x Eval+ Software.

## Histogram Graph and Controls (29 and 30)

The data histogram graph (29) shows the number of times each sample of the ADC output occurs. The control toolbar (30) in the histogram graph allows the user to zoom in on the data (see Figure 19). Click the x-axis and y-axis to change the scales on the graph (see Figure 19).



Figure 19. Histogram Tab of the AD7175-2 Eval+ Software



Figure 20. Filter Profiles of the AD7175-2 Evaluation Software

#### **MODELLED PERFORMANCE TAB (31)**

The **Modelled Performance** tab shows a number of ADC performance parameters, which are calculated using the ADC functional model. There are three main sections to the **Modelled Performance** tab; Filter Profile, Filter Step Response, and Timing Diagram/Power. These can be selected using the drop-down menu (33).

### Analysis Channel (32)

The **Analysis Channel** drop-down menu selects the channel to be evaluated by the functional model.

# Filter Profile (33)

The **Filter Profile** drop-down menu allows the user to switch between the three sections of the **Modelled Performance** tab. Figure 20 shows the **Modelled Performance** tab when filter profile is selected.

# Filter Profile Graph (34)

This graph shows the frequency response for the selected digital filter. The graph controls allows the user to zoom in on the data. Click the x-axis and y-axis to change the scales on the graph.

#### Filter Rejection (35)

This section shows the rejection/attenuation of the digital filter over the rejection bandwidth (Rej.BW) for f1 and f2 in decibels; f1, f2, and Bandwidth can be changed.

#### Filter Performance (36)

This section shows the timing information about the data rate of the selected output. It shows the ADC initial settling time (**Tsettle**), the first frequency notch (**Fnotch**), and the actual sampling frequency (**fADC**).





#### Filter Step Response (37)

This drop down menu allows the user to switch between the three sections of the **Modelled Performance** tab. Figure 21 shows the tab when Filter Step Response is selected.

## Step Response Graph (38)

This graph shows how long the filter takes to settle when the voltage is stepped from one voltage to the next. For this analysis, it is assumed the ADC is continuously converting on only one channel.

#### Step Configuration (39)

Step Configuration allows the user to set the voltage before and after the step and the step position. Step position is set as a percentage where 0% is 1/fADC and 100% is 2/fADC.

# Step Response (40)

This section shows timing information about the data rate of the selected output. It shows fADC, Tsettle, and the settling time between conversions, 1/fADC.

#### Graph Units (41)

Use this control to switch the step response between percentages, volts, and codes.

AD717x Eval+	
File Edit Help	
AD7175-2 Eval+ Configuration Waveform Histogram Modelled Performance Registers 42 Timing Diagram / Power Channel 0 Channel	Sampling Mode Samples Single Capture  1000 Sample
43 Estimated Power Consumption Power 75.25m W AIDD 1 7.55m A AIDD 2 4.75m A DIDD 2.75m A	
44 Timing Diagram	: : : : : : : : <i>"</i> :
/CS ////////	
SCLK 8 sclks 16 sclks 8 sclks 16	3 sclks
DIN 0x01 B[7:4]=0000 0x02 B[7:0]	10X00000_/
DOUT/RDY	
a	0.024 ms b -
<	Þ
	Busy

Figure 22. Timing Diagram/Power of the AD7175-2 Evaluation Software

## Timing Diagram/ Power (42)

This drop down menu allows the user to switch between the three sections of the **Modelled Performance** tab. Figure 22 shows the **Modelled Performance** tab when Filter Step Response is selected.

#### **Estimated Power Consumption (43)**

This section shows the total power consumption of the device in the current configuration, as well as, the current consumption on each of the power supply rails. Note that the estimated power consumption is for the continuous conversion mode only and no other mode of operation is supported.

#### Timing Diagram (44)

This graph shows the digital interface timing diagram for the current configuration. The graph shows the timing for both the configuration of the ADC, and the subsequent data reads from the ADC.

AD7175-2 Eva	Modelled Perform Register 31 0 0 0 0 0 0	45 nance Registers	Samplin Single C 5 5 0 0 0 0 0 0 0 0	ng Mode Samp Capture 💌 100 7 0 0 0 0 0 0 0 0 0		IALOC VICES Sample
	Register 31 0 0 0 0 0 0 0		5 D 0 0 0 0 0 0 0	7 0 0 0 0 0 0 0 0 0		4
AD717x	Register 31 0 0 0 0 0 0 0	23 11 0 0 0 0 0 0 0 0 0 0 0 0 0	5 0 0 0 0 0 0 0 0	7 0 0 0 0 0 0 0 0 0	0	4
	Dittiolde					
	Bitlields					
±₩ DATA	Name	Description	Access	Setting	value	
⊕ 🕮 GPIOCON	CHANNEL	Channel	R	Channel 0	▼ ×0	_ ^
±	REGERROR	Reg Check Error	R	No Error	▼ ×0	_
E CHO	CRCERROR	CRC Error	ĸ	No Error	▼ ×0	_
⊞ CH1     □	ADCERROR	ADC Error	ĸ	No Error	▼ ×0	_
⊕∰ CH2	RDY	Data Ready	R	New Data Ready	▼ ×0	_
± 🕮 CH3					▼ ×0	_
■ 📟 SETUPCON0					▼ ×0	_
± 🕮 SETUPCON1					▼ ×0	_
⊞     SETUPCON2					× ×0	_
E B SETUPCON3					▼ ×0	-
FILTCON0	Describertion					
FILTCON1	Documentation					
日本 の デ目して の に して の の の の の の の の の の の の の	The Status Regis optionally be ap Register.	ster is an 8-bit register that con pended to the Data Register by	tains ADC and serial i setting the DATA_ST	nterface status inform AT bit in the Interface	nation. It can Mode	•
Save   Load     50   51					Device	Error 🔳

Figure 23. **Registers** Tab of the AD7175-2 Evaluation Software

# **REGISTERS TAB (45)**

Figure 23 shows the **Registers** tab.

# Register Tree (46)

This control shows the full register map in a tree control. Each register is shown; click the expand button next to each register to show all the bit fields contained within that register.

#### Register (47)

The **Register** control allows the user to change the individual bit of the register selected in the register tree (46) by clicking the bits or by programming the register value directly into the number control field on the right.

#### Bitfields (48)

This list shows all the bit fields of the register selected in the register tree (46). Change the values by using the drop-down box or by directly entering a value into the number control field on the right.

# **Documentation (49)**

The **Documentation** field contains the documentation for the register or bitfield selected in the register tree (46).

12528-010

#### Save(50) and Load (51)

The **Save** (50) and **Load** (51) buttons allow the user to save the current configuration of the AD7175-2 by saving off of the register map setting to a file and load the setting from that same file. When using these buttons the register configurations are saved and loaded as JSON files.

# **EXITING THE SOFTWARE**

To exit the software, click the close button at the top right corner of the main window (see Figure 16).

# **EVALUATION BOARD SCHEMATICS AND ARTWORK**



Rev. B | Page 21 of 33



Figure 25. Amplifier Schematic



Figure 26. Power Supply Sequencing Schematic

5V, 3.3V & +/- 2.5V Regulators





*Figure 28. SDP-B Connector Schematic* 



Figure 30. Bottom PCB Silkscreen

# <image>

Figure 31. Layer 1 Component Side



Figure 32. Layer 2 Ground Plane

# UG-741



Figure 33. Layer 3 Power/Ground Plane



Figure 34. Layer 4 Solder Side

# **ORDERING INFORMATION**

# **BILL OF MATERIALS**

# Table 4.

Name	Part Description	Manufacturer	Part Number	Stock Code
A0 through A6	Straight PCB mount SMB jack, keep hole clear of solder. Do not insert.	TE Connectivity	1-1337482-0	Do not insert
A7	6-pin SIL header (0.1" pitch)	Harwin	20-9990646	FEC 1022255
C1, C17	Ceramic capacitor, 6.3 V, X5R, 0603, 4.7 μF	Murata	GRM188R60J475K	FEC 173-5527
C2, C38	Ceramic capacitor, 50 V, X7R, 0603, 0.1 µF	Murata	GRM188R71H104K	FEC 882-0023
C3	Ceramic capacitor, 10 V, X5R, 0603, 4.7 μF	KEMET Electronics Corp.	C0603C475K8PACTU	FEC 157-2625
C4, C6	Capacitor, 0805, 50 V, X7R, 1 μF	Murata	GRM21BR71H105KA12L	FEC 1735541
C5, C7 through C9, C16, C24 through C25, C29, C41 through C42, C61 through C63, C65 through C66, C69 through C70, C78 through C82	Ceramic capacitor, not inserted, 0402	Not applicable	Not applicable	Do not insert
C10, C11	Ceramic capacitor XTAL, not inserted, 0402	Not applicable	Not applicable	Do not insert
C12 through C14, C18, C20 through C22, C33 through C34, C37, C40, C44, C52 through C54, C58, C60, C72 through C73, C75, C87, C89, C91	Capacitor ceramic, 16 V, X7R, 0402	Murata	GRM155R71C104K	FEC 881-9742
C15, C30, C56 through C57, C76	Capacitor, 0603, 1 µF, 6.3 V	Murata	GRM188R70J105KA01D	FEC 184-5765
C19, C27 through C28, C55, C59, C83, C85 through C86	Ceramic capacitor, 50 V, C0G/NPO, 0603	AVX Corporation	06035A271JAT2A	FEC 1734627
C23, C26, C84, C88	Ceramic capacitor, 50 V, NPO, 0603	KEMET Electronics Corp.	C0603C681J5GACTU	FEC 1414648
C31, C50 through C51	Ceramic capacitor, 16 V, X7R, 0402, do not insert.	Not applicable	Not applicable	Do not insert
C32, C35 through C36, C39, C48 through C49, C64, C67	Capacitor, multilayer ceramic capacitor (MLCC) X5R, 10 μF, 10 V, 0603	ТДК	C1608X5R1A106K080AC	FEC 221-1164
C43, C45 through C47, C71, C77	Capacitor, MLCC, X5R, 2.2 μF, 10 V, 0603	MCM Electronics	MC0603X225K100CT	FEC 232-0817
C68, C74, C90, C92	50 V X7R MLCC	Yageo	2238 586 15623	FEC 722170
D2, D6, D16	Red LED, high intensity (>90 mCd), 0603	Broadcom Ltd.	HSMC-C191	FEC 855-4528
D4	LED, SMD green	Osram	LGQ971	FEC 1226372
D5	Zener Diode, 0.5 W, 5.1 V	Vishay	BZT52B5V1-V-GS08	FEC 1617767
G16	2-pin (2 mm pitch) header and shorting shunt	Harwin	M22-2010205 & M22- 1920005	FEC 671915 and 510944
G32, G64, G128	2-pin (2 mm pitch) header	Harwin	M22-2010205	FEC 671915

Name	Part Description	Manufacturer	Part Number	Stock Code
GND, GND1 through GND6, GPIO0, GPIO1, REF+, REF-, TDIN, TDOUT, TERR, TCLK, TSYNC, TXTAL1, TXTAL2, T\CS	Test point, not inserted, keep hole clear of solder	Not applicable	Not applicable	Do not insert
J1	120-way connector, 0.6 mm pitch	HIROSE	FX8-120S-SV(21)	FEC 1324660
J2	Straight PCB mount SMB jack, keep hole clear of solder, do not insert	TE Connectivity	1-1337482-0	Do not insert
J3	Socket terminal block, 3.81 mm pitch	Phoenix Contact	MC 1.5/3-G-3.81	FEC 370-4737
J4	Screw terminal block, 3.81 mm pitch, do not insert	Phoenix Contact	Contact 1727023	
J5	DC power connectors 2 mm SMT power jack	Lumberg	161314	FEC 1243245
JG	8-pin terminal header, 3.81 mm pitch, vertical	Phoenix Contact	MC 1,5/ 8-G-3,81	FEC 3704774
J7	Connector, pitch 3.81 mm, right angle	Phoenix Contact	MC 1,5/ 4-G-3,81 and 180- 3594	Do not insert
J8	8-pin screw terminal, 3.81 mm pitch, vertical	Phoenix Contact	1727078	Do not insert
9	Screw terminal block, 3.81 mm pitch	Phoenix Contact	1727036	FEC 370-4592
J10	7-way SSW 2.54 mm vertical socket (make sure to line up with connector on surf board)	Samtec	SSW-107-01-T-S	FEC 1803478
J11, J14	Screw terminal block, 3.81 mm pitch	Phoenix Contact	MKDS1/4-3.81	Do not insert.
J12	4-way power socket block, 3.81 mm pitch	Phoenix Contact	MC1.5/4-G-3.81	FEC 370-4749 and FEC 370-4920
J13	7-way SIP 2.54 mm TH Header (make sure to line up with connector on surf board)	Samtec	TLW-107-05-G-S	FEC 1668499
J15	4- way power socket block, 3.81 mm pitch	Phoenix Contact	MC1.5/4-G-3.81	FEC 370-4749 and FEC 370-4920
L1 through L4	Ferrite bead, 0.3 $\Omega$ at dc, 1000 $\Omega$ at 100 MHz, 350 mA, 0805	TE Connectivity	BMB2A1000LN2	FEC 119-3421
LK1 through LK2	3 pin (3 $\times$ 1) 0.1" header and shorting block in A	Harwin	M20-9990346 & M7566- 05	FEC 1022249 and 411
LK3 through LK7	2-pin (0.1" pitch) header	Harwin	M20-9990246	FEC 1022247
LK8 through LK12	2-pin (0.1" pitch) header and shorting shunt	Harwin	M20-9990246	FEC 1022247 and 411
Q1	SI2304DDS-T1-GE3 MOSFET, N CH,30 V,3.6 A, diode, SOT-23	Vishay	SI2304DDS-T1-GE3	FEC 1858939
Q2	Transistor, NPN, SOT-23	ON Semiconductor	MMBT3904LT1G	FEC 1459100
R1	Resistor, not inserted, 0603	Not applicable	Not applicable	Do not insert.
R2 through R4, R7, R48, R66, R75	Resistor, 100 K, 0.063 W, 1%, 0603	MCM Electronics	MC0063W06031100K	FEC 9330402
R5, R6, R77	Resistor, 10 K, 0.063 W, 1 %, 0402	MCM Electronics	MC00625W0402110K	FEC 1358069
R8, R71	Resistor, 1 %, 0402	Yageo	CRCW040210K0FKEAHP	FEC 173-8864

# UG-741

Namo	Part Description	Manufacturor	Part Number	Stock Code
R9 through R13 R27	Resistor 0603 1 % 0R	MCM Electronics		FEC 9331662
R30, R32, R41, R63, R78, R81 through R84, R87, R95, R99, R101, R103, R105, R107, R111, R114, R117, R121, R124, R128				
through R131				
R14	Resistor, 0402, 1 %, 39 K	MCM Electronics	MC 0.0625W 0402 1% 39K	FEC 1358085
R15, R17, R18, R24	SMD Resistor	MCM Electronics	MC 0.0625W 0402 1% 10K2	FEC 1803137
R16	Resistor, 0402, 1 %, 69K8	MCM Electronics	MC 0.0625W 0402 1% 69K8	FEC 1803735
R19 through R22, R35 through R38, R40, R58, R59, R61, R62, R70, R116	Resistor, 0402	Vishay	CRCW04020000Z0ED	FEC 146-9661
R23	Resistor, 0402, 1 %, 86K6	MCM Electronics	MC 0.0625W 0402 1% 86K6	FEC 1803744
R25, R57	Resistor, 0402, 1 %, 30k1	MCM Electronics	MC 0.0625W 0402 1% 30k1	FEC 1803699
R26, R28, R29, R31, R33, R56, R64, R67, R72, R74, R76, R80, R85, R86, R88, R98, R100, R102, R108 through R110, R112, R113, R115, R118 through R120, R122, R123, R125, R126, R132,	SMD Resistor 0603	Not applicable	Not applicable	Do Not Insert
R34, R39, R46, R47	Resistor, 10 R, 0.063 W, 1 %, 0603	MCM Electronics	MC0063W0603110R	FEC 9330429
R42 through R45	Resistor, Thick Film, 10 kΩ, 62.5 mW, 5 %	Yageo	RC0402JR-1310KL	FEC 179-9316
R49 through R52	Resistor, 1206	MCM Electronics	MC 0.125W 1206 0R	FEC 9336974
R53, R65	Resistor, 10 K, 0.063 W, 1 %, 0603	MCM Electronics	MC0063W0603110K	FEC 9330399
R54	Resistor, Thick Film, 4.53 kΩ, 63 mW, 1 %	Vishay	CRCW04024K53FKED	FEC 1151244
R55	Resistor, 0402, 1 %, 61R9	MCM Electronics	MC 0.0625W 0402 1% 61R9	FEC 1802915
R60	Resistor, Thick Film, 2.4 kΩ, 0603, 100 mW, 1 %	Yageo	RC0603FR-072K4L	FEC 1799329
R68	Resistor, 0603, 4K75, 0.1 %, 0.1 W	Panasonic	ERA3ARB4751V	FEC 209-4611
R69, R104	Resistor, 0603, 0.1 %, 0.1 W, 75K	Panasonic	ERA3ARB753P	FEC 171-7620
R73	Resistor, 88R7, 0.063 W, 0.1 %, 0402	TE Connectivity	RN73C1E88R7B	FEC 173-7900
R79	Resistor, 121R, 0.063 W, 0.1 %, 0603	TE Connectivity/ Holsworthy	RN73C1J121RBTG	FEC 114-0465
R90	Resistor, not inserted, 0402	Not applicable	Not applicable	Do Not Insert
R91	Resistor, 2K26, 0.063 W, 0.1 %, 0402	TE Connectivity	RN73C1E2K26B	FEC 173-8050
R92	Resistor, 51R1, 0.063 W, 0.1 %, 0603	TE Connectivity/ Holsworthy	RN73C1J51R1BTG	FEC 114-0446
R93, R106	Resistor, 0603	Vishay	CRCW06030000Z0EA	FEC 146-9739
R94	Resistor, 0603, 1K13, 0.1 %, 0.1 W	Panasonic	ERA3ARB1131V	FEC 209-4485

Name	Part Description	Manufacturer	Part Number	Stock Code
R96	Resistor, 1K07, 0.063 W,	MCM Electronics	MC0063W060311K07	FEC 1170792
	1 %, 0603			
R97	Resistor, 1K02, 0.063 W,	MCM Electronics	MC0063W060311K02	FEC 1170789
D107	1 %, 0603	Vieland		FFC 14C 0720
KIZ/	Resistor, 0603	Visnay MCM Flootropics		FEC 146-9/39
SLI SLD SLD	2-way Resistor Link Option		MC 0.063 W 0603 UR	FEC 9331662
SL2, SL3	2-way Solder Link (Use Or 0603 Resistor)	Not applicable	Insert in Link Position "A"	FEC 933-1662
SL4	3-way Solder Link (Use 0r 0603 Resistor)	Not applicable	Insert in Link Position "C"	FEC 933-1662
SL5	2-way Solder Link (Use 0r 0603 Resistor)	Not applicable	Insert in Link Position "B"	FEC 933-1662
SL8	4-way Solder Link (Use 0r 0603 Resistor)	Not applicable	Insert in Link Position "A"	FEC 933-1662
SL9, SL10	3-way Solder Link (Use 0r 0603 Resistor)	Not applicable	Insert in Link Position "A"	FEC 933-1662
SL11	4-way Solder Link (Use 0r 0603 Resistor)	Not applicable	Insert in Link Position "A"	FEC 933-1662
STAR3	Ground Link (Copper Short)	Not applicable	Not applicable	Not applicable
U1	32 K I <sup>2</sup> C Serial EEPROM	Microchip Technology Inc.	24LC32A-I/MS	FEC1331330
U2	Linear Regulator 5 V, 20 V, 500 mA, Ultralow Noise, CMOS	Analog Devices, Inc.	ADP7104ARDZ-5.0	ADP7104ARDZ-5.0
U3	Quad Voltage Monitor and Sequencer	Analog Devices, Inc.	ADM1185ARMZ-1	ADM1185ARMZ-1
U4	8 V, –200 mA, Low Noise, Linear Regulator	Analog Devices, Inc.	ADP7182AUJZ	ADP7182AUJZ-R7
U5	ADC	Analog Devices, Inc.	AD7175-2BRUZ	AD7175-2BRUZ
U6	5 V XFET Reference	Analog Devices, Inc.	ADR445BRZ	ADR445BRZ
U7	Linear Regulator 2.5 V, Ultralow Noise, CMOS	Analog Devices, Inc.	ADP7118ARDZ-2.5	ADP7118ARDZ-2.5-R7
U8	5.0 V Ultralow Noise, Zero- Drift, RRIO, Dual Op-Amp	Analog Devices, Inc.	ADA4528-2ARMZ	ADA4528-2ARMZ
U9	Fully Differential Funnel Amplifier	Analog Devices, Inc.	AD8475ARMZ	AD8475ARMZ
U10	Linear Regulator 3.3 V, Ultralow Noise, CMOS	Analog Devices, Inc.	ADP7118ARDZ-3.3	ADP7118ARDZ-3.3-R7
U11	CMOS Switched-Capacitor Voltage Converter	Analog Devices, Inc.	ADM660ARZ	ADM660ARZ
U12	5.0 V Ultralow Noise, Zero- Drift, RRIO, Dual Op-Amp	Analog Devices, Inc.	ADA4528-2ARMZ	ADA4528-2ARMZ
V1 through V4	1206 Place Holder	Not applicable	Not applicable	Do Not Insert
Y1	Miniature Crystal SMD	Epson	FA-20H, 16 MHz, 10 PPM, 9 PF	FEC 171-2814

# NOTES

I<sup>2</sup>C refers to a communications protocol originally developed by Philips Semiconductors (now NXP Semiconductors).



#### ESD Caution

ESD (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

#### Legal Terms and Conditions

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. ("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer; all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. CONFIDENTIALITY. This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. ADDITIONAL RESTRICTIONS. Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the RoHS Directive. TERMINATION. ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. LIMITATION OF LIABILITY. THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). EXPORT. Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. GOVERNING LAW. This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.

©2014–2018 Analog Devices, Inc. All rights reserved. Trademarks and registered trademarks are the property of their respective owners. UG12528-0-1/18(B)



www.analog.com