


TOUCH PANEL CONTROL BOARD 7-WIRE SERIAL

N16B-0558-B280 Serial Interface Controller Board Quick Reference

7-Wire Resistive Touch Panels

 


 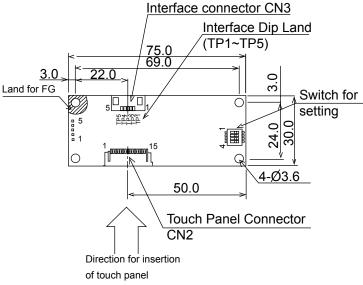


■ FEATURES

- High quality and reliability touch panel control board with switch selectable cable tail exit direction.
- RS232C Interface for direct connection to PC serial interfaces.
- Used to control the 7-wire resistive touch panels (in PnP or non-PnP mode).
- · RoHS compliant

■ SWITCH SETTINGS





SW3: PnP setting: SW3 ON is PnP enable, SW3 OFF is PnP disable

Origin (0,0) Point

■ CONSTRUCTION

| Specification Item | | N16B-0558-B280 7-Wire Serial Control Board | |
|--------------------|----------------------------|--|--|
| Mechanical | Size / Weight | 75mm x 30mm / 30 g | |
| Electrical | Supply voltage(max./min.) | Vcc 5.5V at Vss=6V/Vcc is 4.5V at Vss=0.3 V | |
| | Operating current (detect) | 57 mA at Vcc = 5V and T = 25 degrees | |
| | Sleep Mode current1 | 16 mA at Vcc = 5V and T = 25 degrees | |
| Environment | Operating Temperature | -5° C to +60° C | |
| | Storage Temperature | -30° C to +70° C | |
| | Humidity | 20%RH to 85% RH at +38° C maximum wet bulb temperature | |

1

Serial 7-Wire Control Board

■ TOUCH PANEL CONNECTION CN2 (FCI: SFW15R-1STAE1-LF)

■ INTERFACE CONNECTION CN3 (Molex: 53398-0571)

| | | -B280 | Host |
|----|---------------|-------|------|
| 1. | +5V (Vcc) | 1+5V | +5V |
| 2. | Transmit data | 2 TXD | RXD |
| 3. | Receive data | 3 RXD | TXD |
| 4. | | 4 CTS | RTS* |
| 5. | Ground | 5 Gnd | Gnd |

^{*} optional: used for plug-n-play detection

Complete specification document is available on request for customers with whom we have an approved NDA in place.

Fujitsu Components International Headquarter Offices

Japan

Fujitsu Component Limited Gotanda-Chuo Building

3-5, Higashigotanda 2-chome, Shinagawa-ku

Tokyo 141, Japan Tel: (81-3) 5449-7010 Fax: (81-3) 5449-2626

Email: promothq@ft.ed.fujitsu.com

Web: www.fcl.fujitsu.com

North and South America

Fujitsu Components America, Inc. 250 E. Caribbean Drive Sunnyvale, CA 94089 U.S.A. Tel: (1-408) 745-4900

Fax: (1-408) 745-4970

Email: components@us.fujitsu.com

Web: http://www.fujitsu.com/us/services/edevices/components/

Europe

Fujitsu Components Europe B.V.

Diamantlaan 25
2132 WV Hoofddorp
Netherlands
Tel: (31-23) 5560910
Fax: (31-23) 5560950
Email: info@fceu.fujitsu.com
Web: emea.fujitsu.com/components/

Asia Pacific

Fujitsu Components Asia Ltd. 102E Pasir Panjang Road #01-01 Citilink Warehouse Complex

Singapore 118529 Tel: (65) 6375-8560 Fax: (65) 6273-3021 Email: fcal@fcal.fujitsu.com

Web: http://www.fujitsu.com/sg/services/micro/components/

©2006 Fujitsu Components America, Inc. All rights reserved. All trademarks or registered trademarks are the property of their respective owners.

Fujitsu Components America or its affiliates do not warrant that the content of datasheet is error free. In a continuing effort to improve our products Fujitsu Components America, Inc. or its affiliates reserve the right to change specifications/datasheets without prior notice. Rev. May26/2006

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Fujitsu:

N16B-0558-B280