

STANDARD KEYPAD LEGENDS

OPER 0 -0130	1 -0131	ABC 2 -0132	DEF 3 -0133	GHI 4 -0134	JKL 5 -0135	MNO 6 -0136	PRS 7 -0137	TUV 8 -0128	WXY 9 -0129			
0 -0100	1 -0001	2 -0002	3 -0003	4 -0004	5 -0005	6 -0006	7 -0007	8 -0008	9 -0009	10 -0010	11 -0011	12 -0012
13 -0013	14 -0014	15 -0015	16 -0016									
A -0101	B -0102	C -0103	D -0104	E -0105	F -0106	G -0107	H -0108	I -0109	J -0110	K -0111	L -0112	M -0113
N -0114	O -0115	P -0116	Q -0117	R -0118	S -0119	T -0120	U -0121	V -0122	W -0123	X -0124	Y -0125	Z -0126
* -0215	# -0216	+ -0205	- -0206	x -0207	÷ -0208	. -0209	= -0203	% -0204	→ -0210	Note: -0210 arrow can be inserted in in any of 4 directions		↕ -0217
ALT -0347	AUTO -0301	CALL -0302	CAN-CEL -0340	CLEAR -0303	CLR -0344	DEC -0360	DISK -0348	DOWN -0304	EDIT -0305	EN-ABLE -0343	END -0306	ENT -0345
ENTER -0307	ERASE -0308	EXIT -0309	FREQ -0310	FWD -0311	GO -0312	HOLD -0341	HOST -0349	IN -0313	INC -0359	INPUT -0314	JOB -0351	JOB -0352
LOAD -0315	LOCK -0357	MAIN MENU -0354	MAN -0358	MENU -0316	MODE -0317	NEXT -0318	OFF -0319	ON -0320	OUT -0321	PREV -0356	PRINT -0322	PRO-GRAM -0323
PWR -0324	READ -0325	RECV -0326	REM -0355	RE-SET -0327	REV -0328	ROLL -0353	RUN -0329	SAVE -0342	SCAN -0330	SEND -0331	SET -0350	SHIFT -0332
SKIP -0333	SRCH -0334	START -0335	STOP -0336	STORE -0337	TEST -0346	UP -0338	XMIT -0339					

Printed Button Availability

Most black on white, and white on black legends are stocked by distributors. For other color combinations allow time for delivery.

For local distributor contact Grayhill.

Printed Button Numbers

