STANDARD KEYPAD LEGENDS

OPER 0	1	ABC 2	DEF 3	GHI 4	JKL 5	MNO 6	PRS 7	TUV 8	WXY 9			
-0130	-0131	-0132	-0133	-0134	-0135	-0136	-0137	-0128	-0129			
0	1	2	3	4	5	6	7	8	9	10	11	12
-0100	-0001	-0002	-0003	-0004	-0005	-0006	-0007	-0008	-0009	-0010	-0011	-0012
13	14	15	16									
-0013	-0014	-0015	-0016									
A	B	C	D	E	F	G	H	I	J	K	L	M
-0101	-0102	-0103	-0104	-0105	-0106	-0107	-0108	-0109	-0110	-0111	-0112	-0113
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
-0114	-0115	-0116	-0117	-0118	-0119	-0120	-0121	-0122	-0123	-0124	-0125	-0126
*	#	+	-	×	÷	.	=	%	→	Note: -0210 arrow can be inserted in in any of 4 directions		↑/↓
-0215	-0216	-0205	-0206	-0207	-0208	-0209	-0203	-0204	-0210			-0217
ALT	AUTO	CALL	CAN-CEL	CLEAR	CLR	DEC	DISK	DOWN	EDIT	EN-ABLE	END	ENT
-0347	-0301	-0302	-0340	-0303	-0344	-0360	-0348	-0304	-0305	-0343	-0306	-0345
ENTER	ERASE	EXIT	FREQ	FWD	GO	HOLD	HOST	IN	INC	INPUT	JOB	JOB
-0307	-0308	-0309	-0310	-0311	-0312	-0341	-0349	-0313	-0359	-0314	-0351	-0352
LOAD	LOCK	MAIN MENU	MAN	MENU	MODE	NEXT	OFF	ON	OUT	PREV	PRINT	PRO-GRAM
-0315	-0357	-0354	-0358	-0316	-0317	-0318	-0319	-0320	-0321	-0356	-0322	-0323
PWR	READ	RECV	REM	RE-SET	REV	ROLL	RUN	SAVE	SCAN	SEND	SET	SHIFT
-0324	-0325	-0326	-0355	-0327	-0328	-0353	-0329	-0342	-0330	-0331	-0350	-0332
SKIP	SRCH	START	STOP	STORE	TEST	UP	XMIT					
-0333	-0334	-0335	-0336	-0337	-0346	-0338	-0339					

Printed Button Availability

Most black on white, and white on black legends are stocked by distributors. For other color combinations allow time for delivery.

For local distributor contact Grayhill.
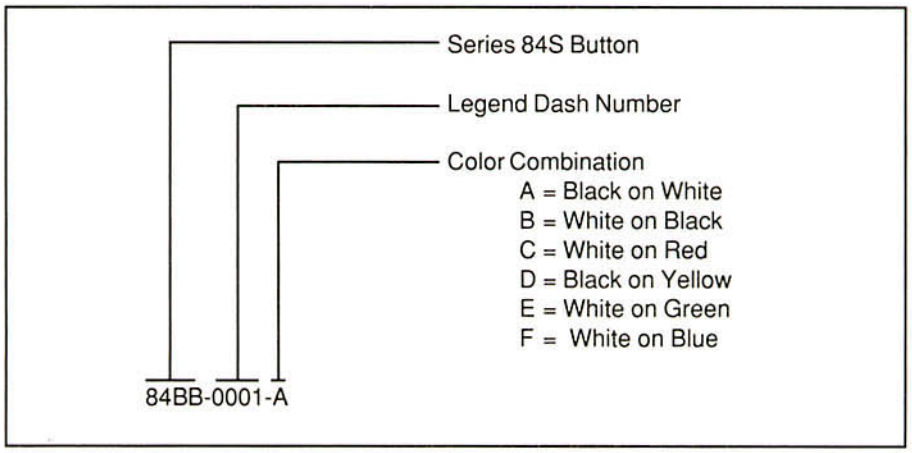
Printed Button Numbers