



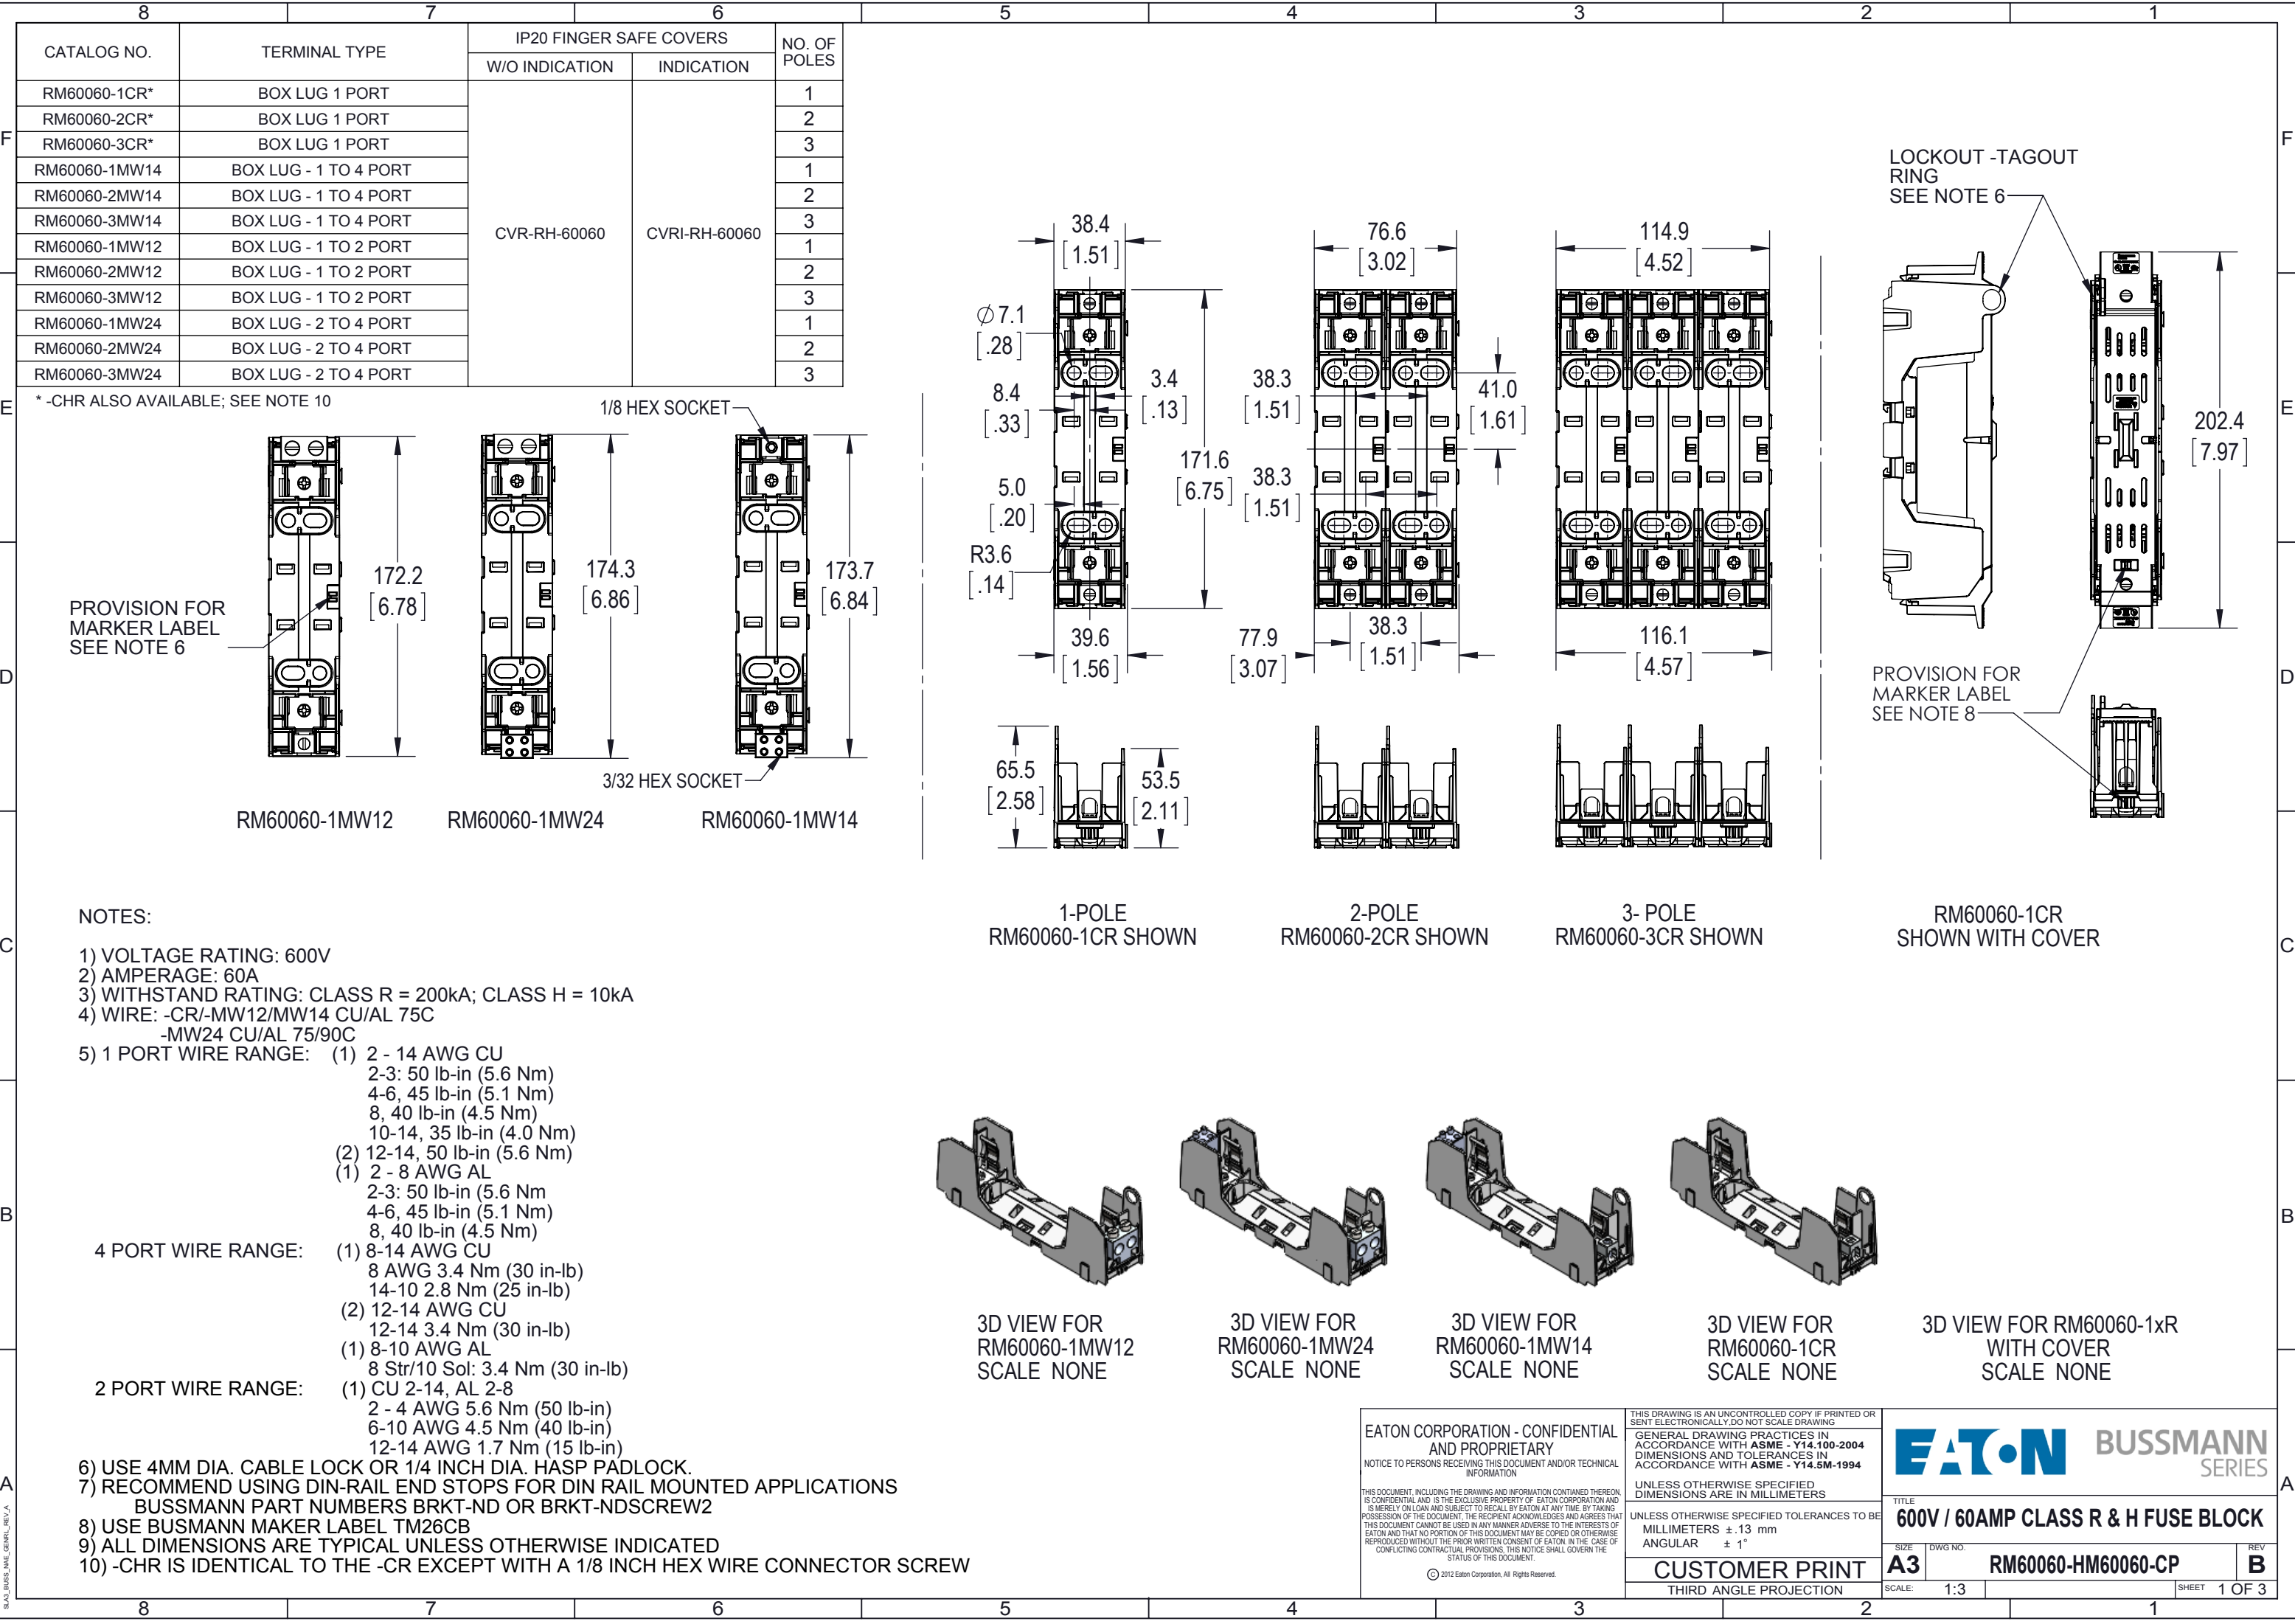

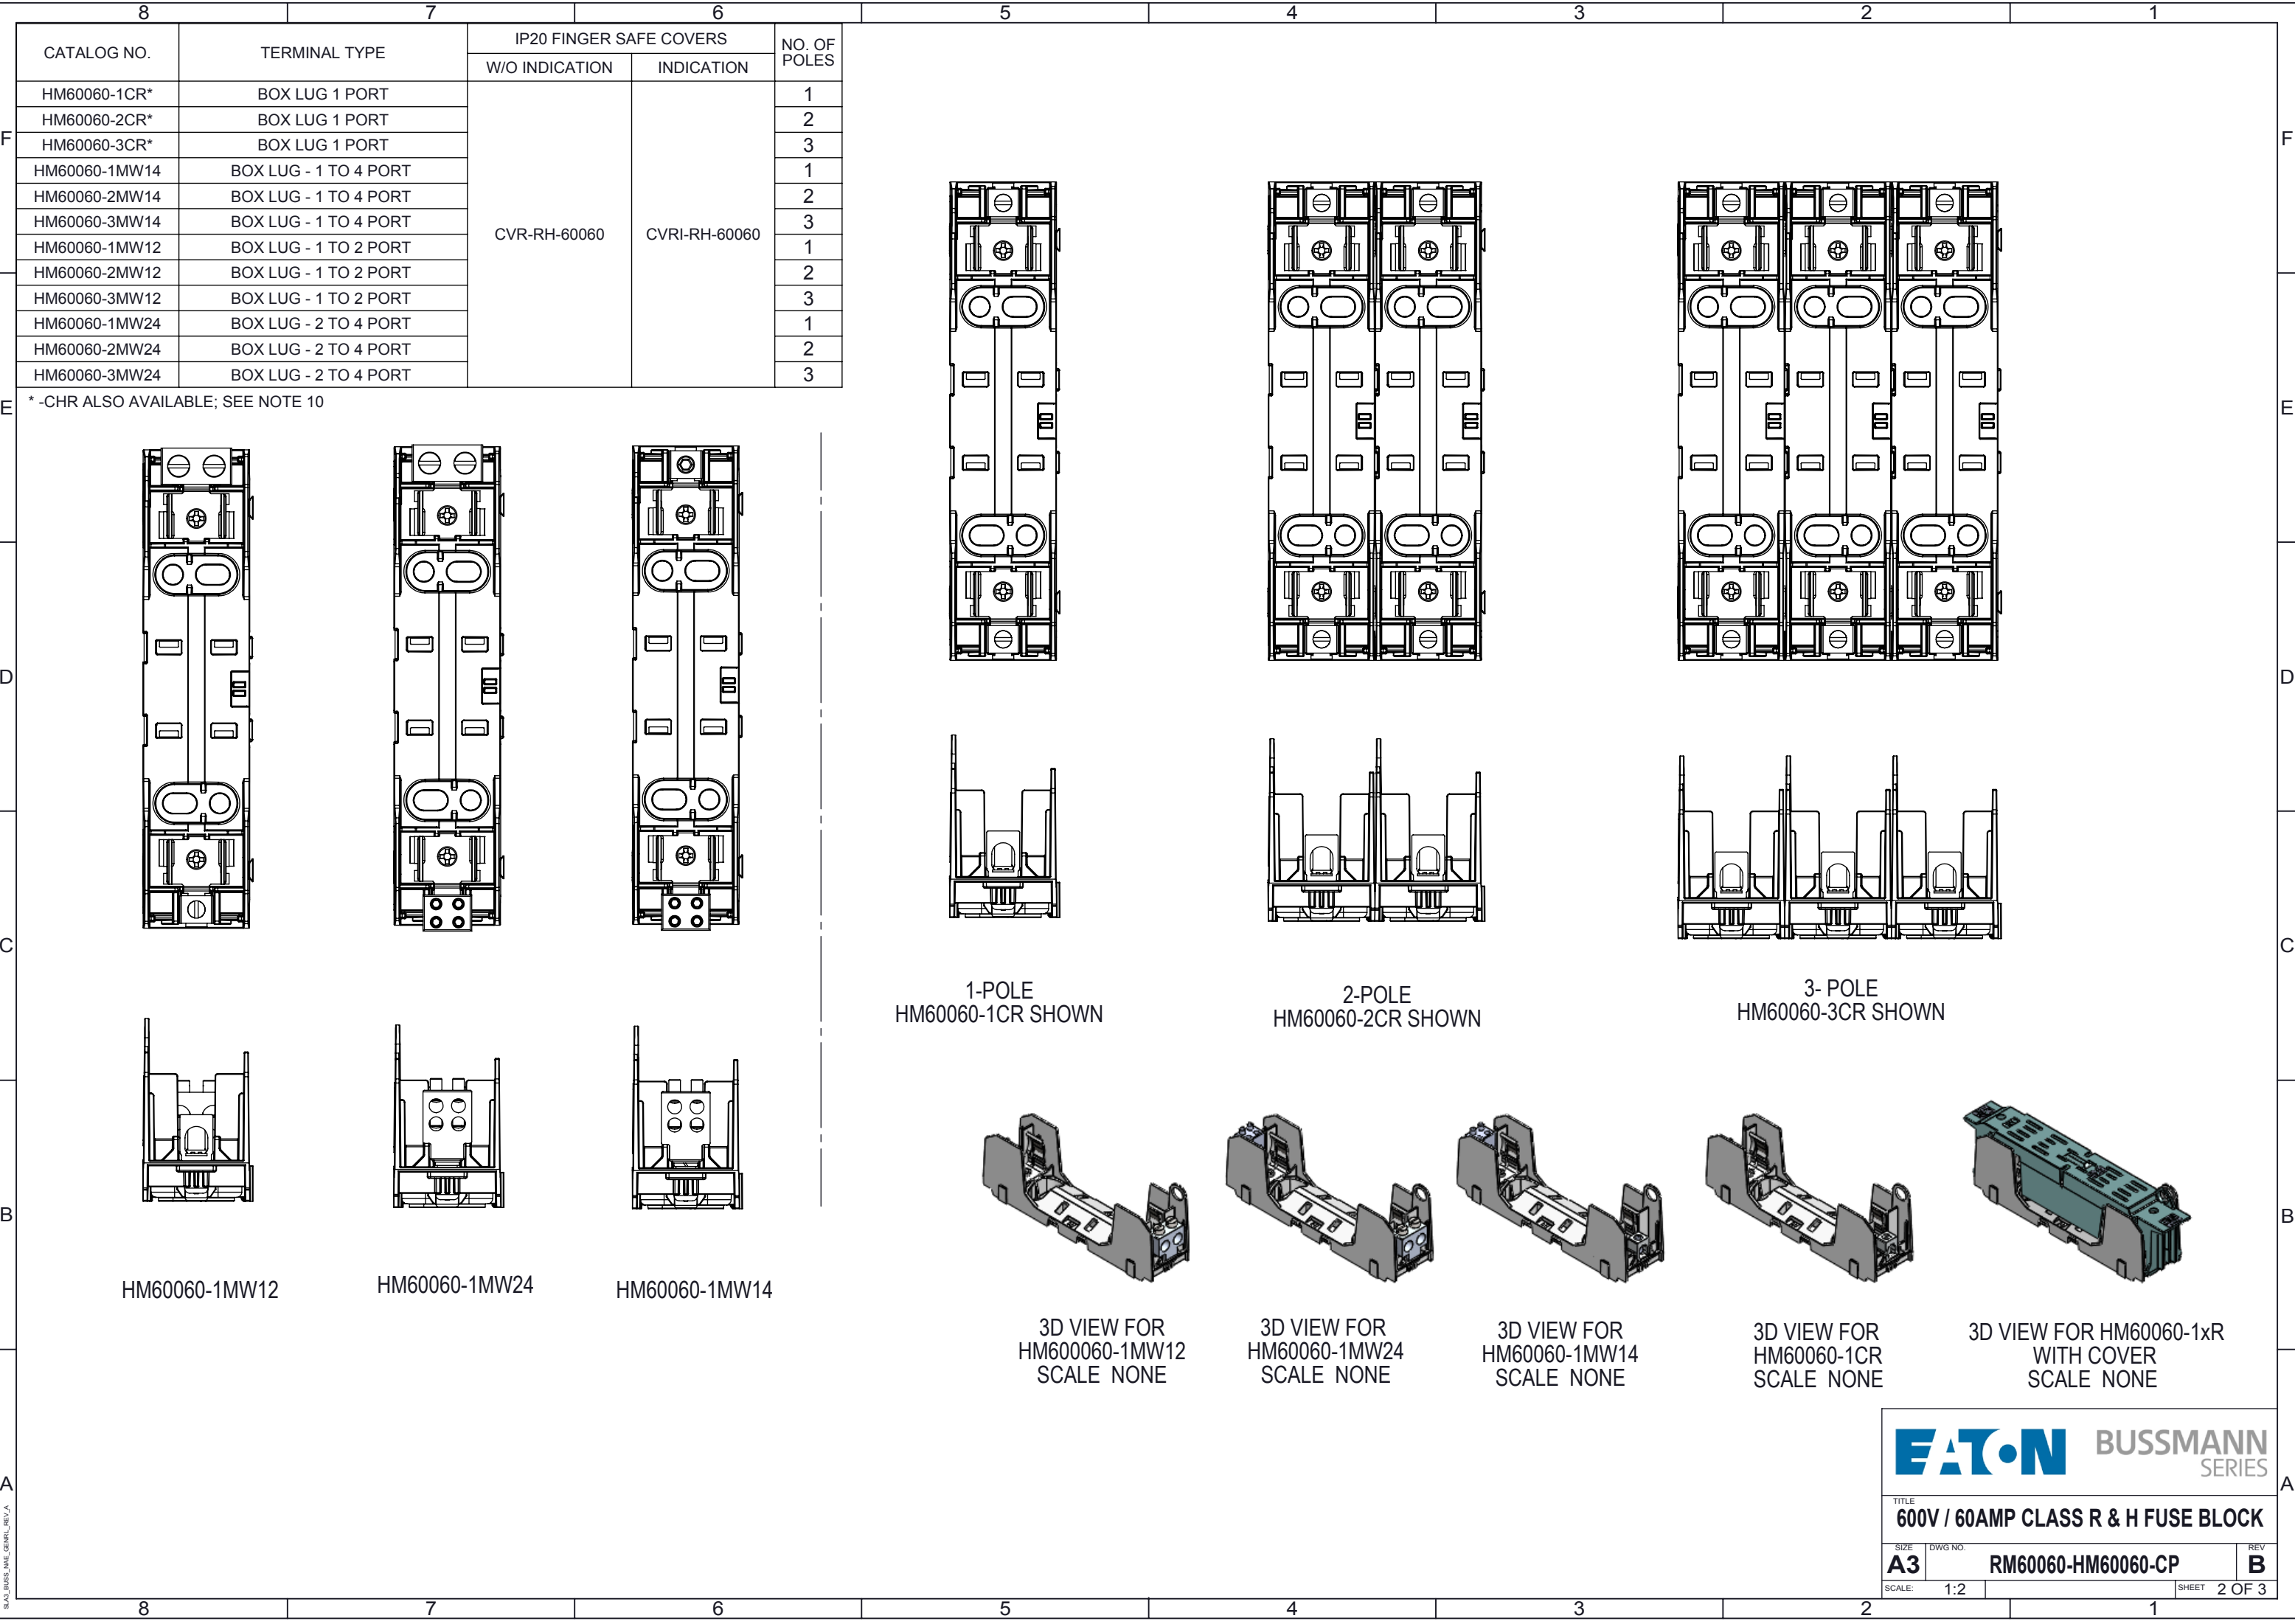

* -CHR ALSO AVAILABLE; SEE NOTE 10

SLA3_BUSSMAN_GENRBL_REV_A

EAT•N

BUSSMANN
SERIES

TITLE
600V / 60AMP CLASS R & H FUSE BLOCK



SIZE
A3

DWG NO.
RM60060-HM60060-CP



REV
B

SCALE: 1:2

SHEET 2 OF 3

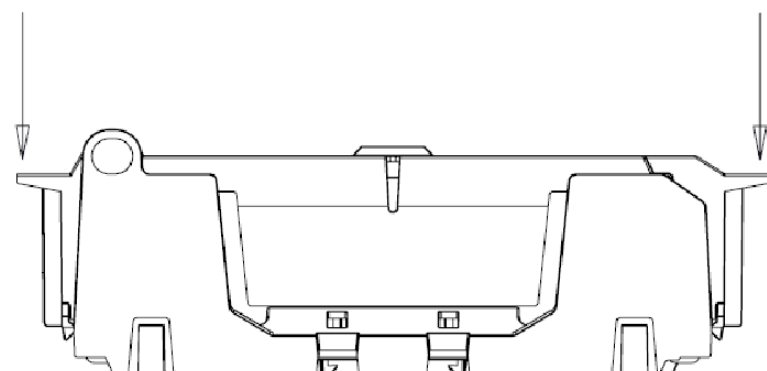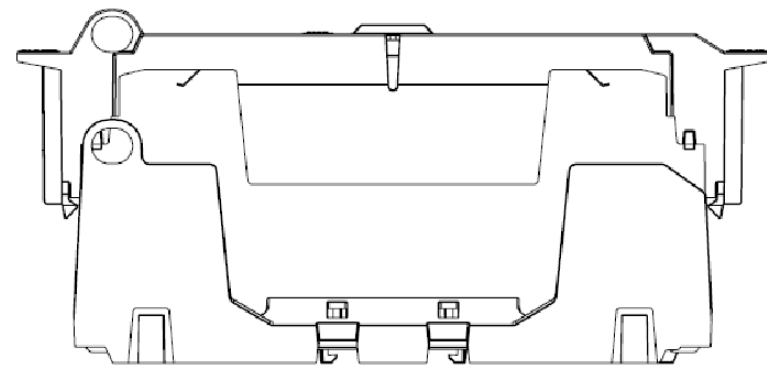


CLOSING
PUSH STRAIGHT DOWN UNTIL SNAPS CLICK INTO PLACE

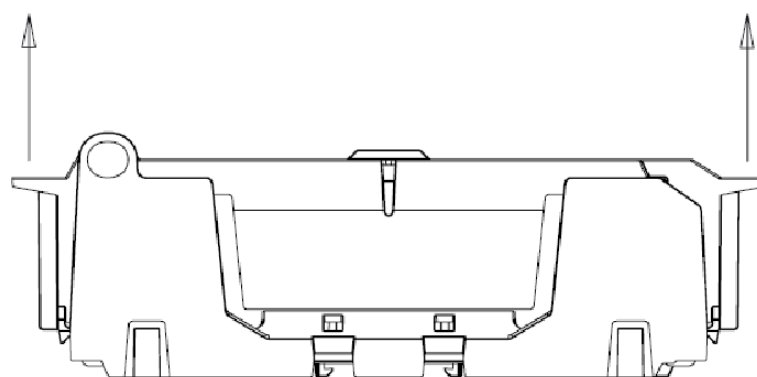
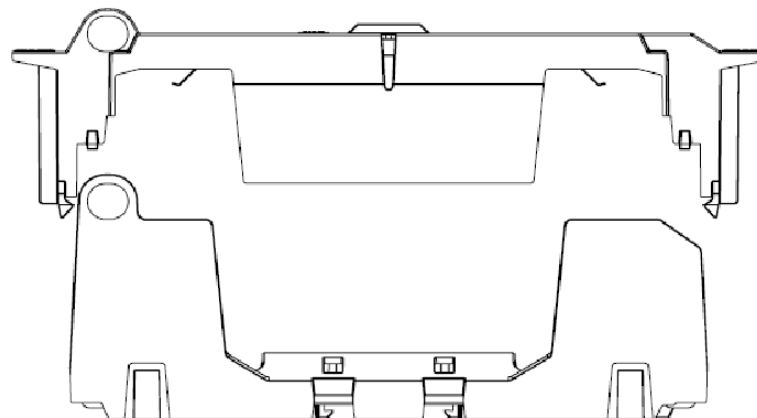


OPENING
PULL STRAIGHT UP AT BOTH OUTSIDE HANDLES


CUT COVER TAB AT NOTCH FOR USE WITH WIRES LARGER THAN 8 AWG

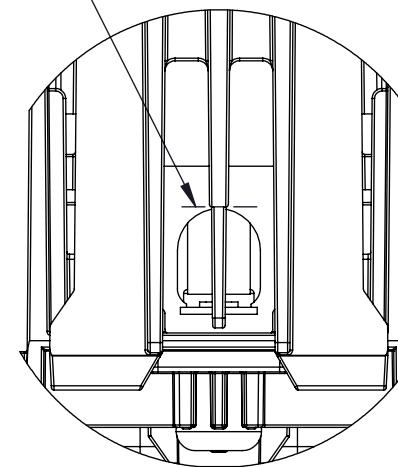

DETAIL A
SCALE 4 : 3

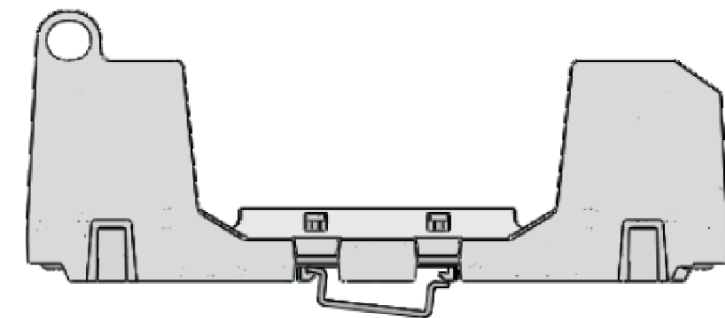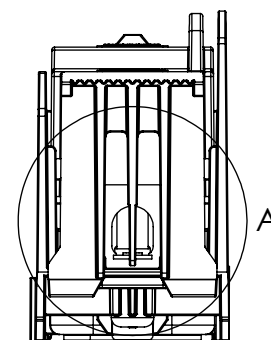

1. HOOK DIN RAIL SNAPS ON ONE SIDE OF THE DIN RAIL

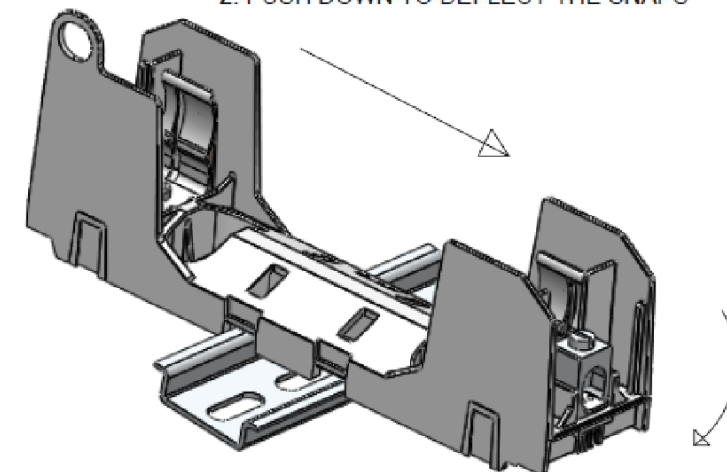

2. PUSH DOWN TO DEFLECT THE SNAPS

3. ROTATE UNTIL THE OPPOSITE SIDE SNAPS ONTO DIN RAIL

INSTALLATION ON DIN RAIL
END STOPS MAY BE NECESSARY FOR SOME ASSEMBLY CONDITIONS - SEE NOTE 7

EAT•N BUSSMANN
SERIES

TITLE
600V / 60AMP CLASS R & H FUSE BLOCK

SIZE DWG NO. REV
A3 **RM60060-HM60060-CP** **B**

SCALE: 2:3 SHEET 3 OF 3