

# LTM9003 Digital Predistortion Receiver Subsystem

## DESCRIPTION

Demonstration circuit 1437B is an evaluation board featuring Linear Technology Corporation's **LTM®9003** 12-Bit Predistortion Receiver Subsystem. DC1437 demonstrates good circuit layout techniques and recommended external circuitry for optimal system performance.

DC1437 comes with Linear Technology's 12-bit LTM9003 receiver subsystem installed. The board includes output LVDS buffers. DC1437 plugs into the DC890 Data Acqui-

sition demo board and the output can be easily analyzed with Linear Technology's PScope™ data processing software, which is available for no charge on our website at <http://www.linear.com/software>.

**Design files for this circuit board are available at <http://www.linear.com/demo>**

LT, LT, LTC, LTM, Linear Technology and the Linear logo are registered trademarks and PScope is a trademark of Linear Technology Corporation. All other trademarks are the property of their respective owners.

## CONNECTION DIAGRAM

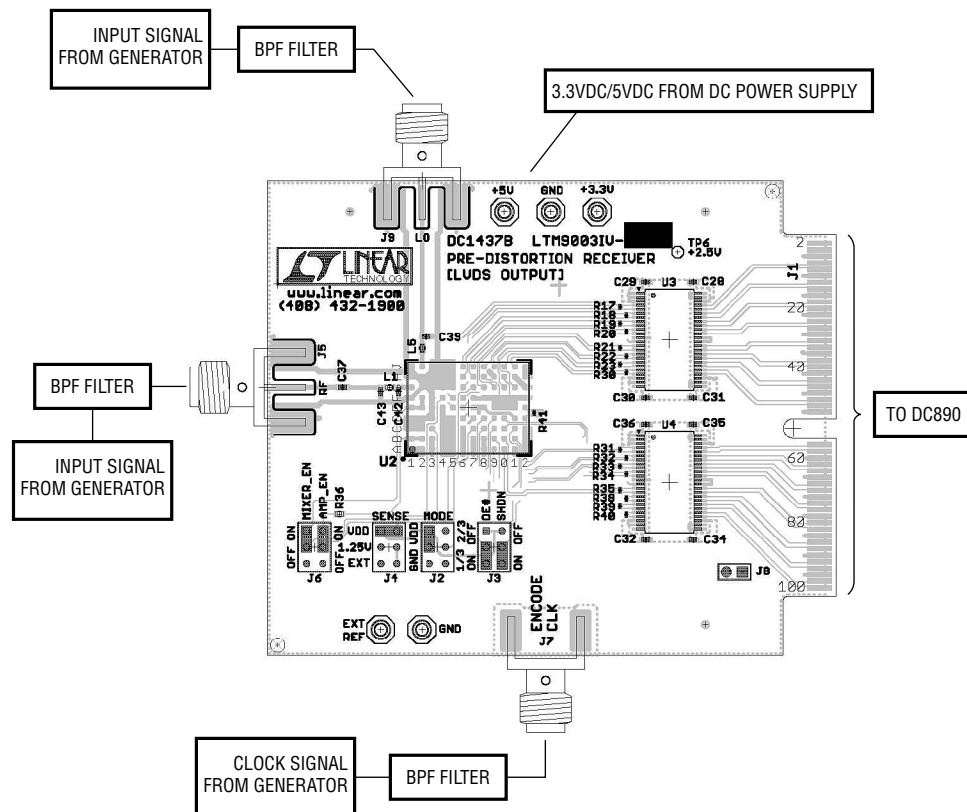


Figure 1. DC1437B Connection Diagram

## QUICK START PROCEDURE

Validating the performance of the LTM9003 is simple with DC1437, and requires only two input sources, a clock source, a computer, and a lab power supply. Note the RF and LO inputs are matched for 1.4GHz to 2.2GHz, and 0.9GHz to 3GHz, respectively. Refer to the schematic in Figure 4 for other matching configurations to accommodate other frequency ranges. Refer to Figure 1 for proper board evaluation equipment setup and follow the procedure below:

1. Plug the DC1437B to the DC890 USB High Speed Data Collection Board using edge connector P1.
2. Connect the DC890 to a host PC with a standard USB A/B cable. Note the DC890B will also require an external 6V, 1A power supply when receiving LVDS format signals.
3. Run the PScope software (PScope.exe version K76 or later) which can be downloaded from [www.linear.com/designtools/software](http://www.linear.com/designtools/software). Complete software documentation is available from the Help menu. Updates can be downloaded from the Tools menu. Check for updates periodically as new features may be added.
4. The PScope software should recognize the DC1437B and configure itself automatically. See Figure 3 for the default configuration settings.
5. Connect the power supply as shown in Figure 1. There are onboard low noise voltage regulators that provide the supply voltage for the DC1437. Note that the LTM9003-AA requires a 3.3V supply voltage for the mixer, whereas the LTM9003-AB requires 5V. As such, only the DC1437B-AB board requires 5V as well as 3.3V input; the DC1437B-AA board can be powered from 3.3V only. The entire board and all components share a common ground. The power supply should still be a low noise lab power supply capable of supplying at least 1A.
6. Provide an encode clock to the ADC via SMA connector J7. Use a low-phase-noise clock source such as a filtered RF signal generator or a high quality clock oscillator. Note that, similar to having a noisy input, a high jitter (high phase noise) encode clock will degrade the signal-to-noise ratio (SNR) of the system.
7. Apply an RF input signal to the board. For best results, use a low distortion, low noise signal generator with sufficient filtering to avoid degrading the performance of the receiver.
8. Apply an LO input signal to the board. Note that the difference in frequency between this signal and the RF signal will be the IF frequency resulting at the IF filter and ADC input.
9. Click the Collect button (see Figure 2) to begin acquiring data. The Collect button then should change to Pause. To stop data acquisition, click the Pause button.

Table 1. DC1437B Assembly Options

| ASSEMBLY VERSION | U2 PART NUMBER | MAX CONVERSION RATE | NUMBER OF BITS | MIXER SUPPLY VOLTAGE | RF FREQUENCY RANGE |
|------------------|----------------|---------------------|----------------|----------------------|--------------------|
| DC1437B-AA       | LTM9003-AA     | 250Msps             | 12             | 3.3V                 | 400MHz TO 3800MHz  |
| DC1437B-AB       | LTM9003-AB     | 250Msps             | 12             | 5V                   | 400MHz TO 3700MHz  |

## DC1437B CONNECTORS AND JUMPERS

### Connector Definitions

**J5** – RF Board RF Signal Input. Impedance matched to 50Ω for use with lab signal generators.

**J7** – CLK Board Clock Input. Impedance matched to 50Ω. Drive with a low phase-noise clock oscillator or filtered sine wave signal source.

**J9** – LO Board LO Signal Input. Impedance matched to 50Ω for use with lab signal generators.

### Jumper Definitions

**J2** – MODE Sets the output format and clock duty stabilizer. The default setting is  $V_{DD}$ . This enables 2's complement format and disables the clock duty cycle stabilizer.

**J3** – SHDN/ $\overline{OE}$  Enables/disables the ADC. The default setting for both jumpers is ON.

**J4** – SENSE Sets the SENSE mode. The default setting is  $V_{DD}$ . This selects the internal reference and a  $\pm 1V$  input range at the ADC.

**J6** – MIXER/AMP ENABLE Enables the internal mixer and amplifiers. The default setting for both jumpers is ON.

**ADC Configuration**

Read Demo Board ☒ Config Manually

DemoBd DC\_1437A-AA LTM9003-AA

Bits 12 Chnns 1

Alignment 15 ☒ Bipolar

FPGA Ld LVDS ☐ Positive-Edge Clk

Cancel Apply

Figure 3. PScope Configuration Menu

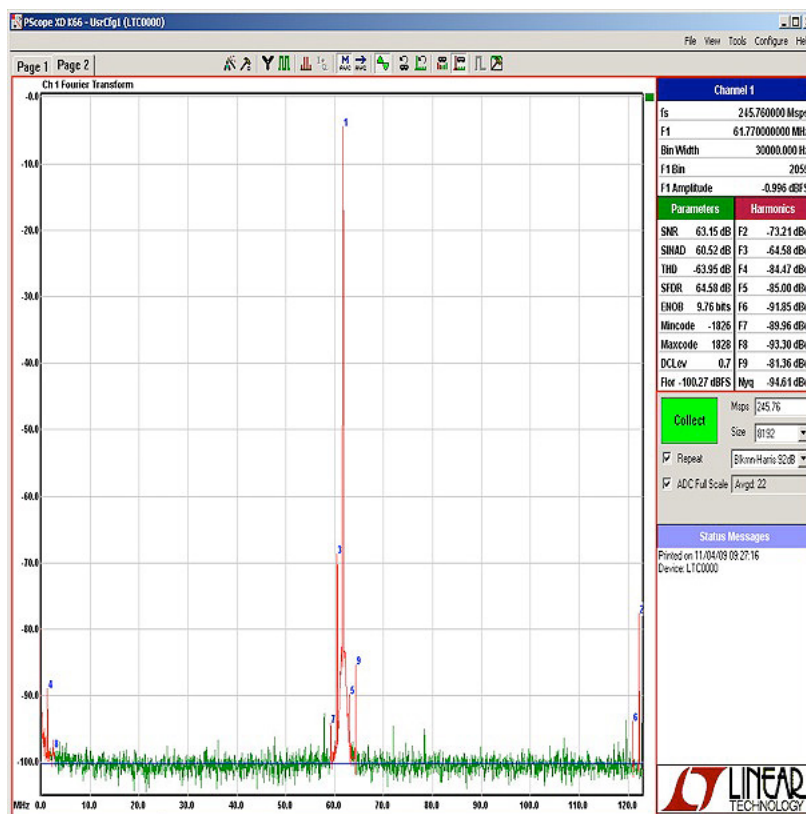


Figure 2. PScope Screen Shot

# DEMO MANUAL DC1437B

## PARTS LIST


| ITEM                               | QTY | REFERENCE               | PART DESCRIPTION                    | MANUFACTURER/PART NUMBER |
|------------------------------------|-----|-------------------------|-------------------------------------|--------------------------|
| <b>Required Circuit Components</b> |     |                         |                                     |                          |
| 1                                  | 1   | T2                      | BALUN, 1:1, SMT, SM-22              | MACOM/MABA-007159-000000 |
| 2                                  | 0   | C37, C42                | DNI                                 |                          |
| 3                                  | 1   | C43                     | CAP, NPO, 1.0pF, 50V, 0.25pF, 0402  | AVX/04025A1R0CAT2A       |
| 4                                  | 1   | C39                     | CAP, NPO, 0.5pF, 50V, 0.25pF, 0402  | AVX/04025A0R5CAT2A       |
| 5                                  | 1   | C4                      | CAP, NPO, 8.2pF, 50V, 0.25pF, 0402  | AVX/04025A8R2CAT2A       |
| 6                                  | 3   | C1, C2, C44             | CAP, X5R, 0.01µF, 16V, 10%, 0402    | AVX/0402YC103KAT         |
| 7                                  | 10  | C19, C27-32, C34-36     | CAP, X5R, 0.1µF, 10V, 10%, 0402     | AVX/0402ZD104KAT         |
| 8                                  | 1   | C45                     | CAP, X5R, 10µF, 6.3V, 20%, 0805     | AVX/08056D106MAT         |
| 9                                  | 2   | C5, C6                  | CAP, X5R, 4.7µF, 10V, 20%, 0805     | AVX/0805ZD475MAT         |
| 10                                 | 2   | C3, C7                  | CAP, X7R, 0.1µF, 16V, 10%, 0603     | AVX/0603YC104KAT         |
| 11                                 | 3   | J5, J7, J9              | CONN, SMA, 50Ω, EDGE-LAUNCH, FEMALE | AMPHENOL_CONNEX/132357   |
| 12                                 | 0   | J8                      | DNI                                 |                          |
| 13                                 | 4   | J2, J3, J4, J6          | HEADER, 3 × 2, 2mm                  | SAMTEC TMM103-02-L-D     |
| 14                                 | 1   | L1                      | IND, 3.9nH, 5%, 0402                | COILCRAFT/0402CS-3N9XJLW |
| 15                                 | 1   | L5                      | IND, 2.7nH, 5%, 0402                | COILCRAFT/0402CS-2N7XJLW |
| 16                                 | 1   | U1                      | IC, Serial_EEPROM, TSSOP8           | MICROCHIP/24LC025-I_ST   |
| 17                                 | 1   | U10                     | IC, VREG, ADJ, 500MA, S08           | LINEAR_TECH/LT1763CDE    |
| 18                                 | 2   | U3, U4                  | IC, RPTR, LVDS, OCTAL, SMT, TSSOP   | FAIRCHILD/FIN1108        |
| 19                                 | 3   | R3, R13, R14            | RES, 0_OHM_JUMPER, 0805             | VISHAY CRCW08050000Z0EA  |
| 20                                 | 14  | R17-23, R28, R30-35     | RES, 100, 1%, 1/20, 0201            | VISHAY CRCW0201100RF     |
| 21                                 | 0   | R9, R38-R41             | DNI                                 |                          |
| 22                                 | 3   | R9, R10, R24            | RES, 100k, 1%, 1/16, 0402           | VISHAY CRCW0402100KFKED  |
| 23                                 | 1   | R12                     | RES, 10k, 1%, 1/16, 0402            | VISHAY CRCW040210K0FKED  |
| 24                                 | 2   | R4, R5                  | RES, 4.99, 1%, 1/16, 0402           | VISHAY CRCW04024R99FKED  |
| 25                                 | 2   | R1, R2                  | RES, 49.9, 1%, 1/16, 0402           | VISHAY CRCW040249R9FKED  |
| 26                                 | 5   | R25, R26, R27, R29, R36 | RES, 4990, 1%, 1/16, 0402           | VISHAY CRCW04024K99FKED  |
| 27                                 | 2   | R7, R11                 | RES, 499, 1%, 1/10W, 0603           | VISHAY CRCW0603499RFKEA  |
| 28                                 | 2   | R6, R8                  | RES, 1000, 1%, 1/10W, 0603          | VISHAY CRCW06031K00FKEA  |
| 29                                 | 5   | TP1-5                   | TURRET                              | MILL_MAX/2308-2          |
| 30                                 | 4   |                         | STAND-OFF, NYLON 0.25" TALL         | KEystone, 8831 (SNAP ON) |

### DC1437B-AA Required Circuit Components

|   |   |         |                      |                                 |
|---|---|---------|----------------------|---------------------------------|
| 1 | 1 | DC1437B | General BOM          |                                 |
| 2 | 0 | R15     | Res., DNI            |                                 |
| 3 | 1 | R16     | RES, 0Ω JUMPER, 0805 | VISHAY CRCW08050000Z0EA         |
| 4 | 1 | U2      | I.C., µModule        | Linear Tech. Corp. LTM9003CV-AA |

### DC1437B-AB Required Circuit Components

|   |   |         |                      |                                 |
|---|---|---------|----------------------|---------------------------------|
| 1 | 1 | DC1437B | General BOM          |                                 |
| 2 | 0 | R16     | Res., DNI            |                                 |
| 3 | 1 | R15     | RES, 0Ω JUMPER, 0805 | VISHAY CRCW08050000Z0EA         |
| 4 | 1 | U2      | I.C., µModule        | Linear Tech. Corp. LTM9003CV-AB |



# DEMO MANUAL DC1437B

---

## DEMONSTRATION BOARD IMPORTANT NOTICE

Linear Technology Corporation (LTC) provides the enclosed product(s) under the following **AS IS** conditions:

This demonstration board (DEMO BOARD) kit being sold or provided by Linear Technology is intended for use for **ENGINEERING DEVELOPMENT OR EVALUATION PURPOSES ONLY** and is not provided by LTC for commercial use. As such, the DEMO BOARD herein may not be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including but not limited to product safety measures typically found in finished commercial goods. As a prototype, this product does not fall within the scope of the European Union directive on electromagnetic compatibility and therefore may or may not meet the technical requirements of the directive, or other regulations.

If this evaluation kit does not meet the specifications recited in the DEMO BOARD manual the kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY THE SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THIS INDEMNITY, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user releases LTC from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge. Also be aware that the products herein may not be regulatory compliant or agency certified (FCC, UL, CE, etc.).

No License is granted under any patent right or other intellectual property whatsoever. **LTC assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or any other intellectual property rights of any kind.**

LTC currently services a variety of customers for products around the world, and therefore this transaction **is not exclusive**.

**Please read the DEMO BOARD manual prior to handling the product.** Persons handling this product must have electronics training and observe good laboratory practice standards. **Common sense is encouraged.**

This notice contains important safety information about temperatures and voltages. For further safety concerns, please contact a LTC application engineer.

Mailing Address:

Linear Technology  
1630 McCarthy Blvd.  
Milpitas, CA 95035

Copyright © 2004, Linear Technology Corporation

dc1437bf