

Description: piezo electric diaphragm

Date: 6/25/2007 Unit: mm Page No: 1 of 4




Specifications

Maximum input voltage	30 Vp-p	
Resonant frequency	2.9 ± 0.5 KHz	see Measurement Methods
Resonant impedance	500 Ω max.	see Measurement Methods
Electrostatic capacitance	25,000 ±30% pF	at 1 KHz / 1 V
Operating temperature	-20 ~ +70° C	
Storage temperature	-30 ~ +80° C	
Dimensions	ø35.0 x H0.58 mm	
Weight	3.50 g max.	
Material	Brass	
Terminal	Wire type	
RoHS	yes	

Appearance Drawing

Tolerance: ±0.5

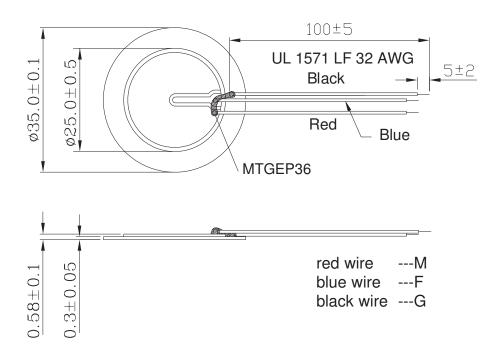



Description: piezo electric diaphragm

Date: 6/25/2007 Unit: mm


Page No: 2 of 4

Measuring Methods

1) Resonant frequency / Resonant impedance

The piezo electric diaphragm should be clamped at a node point (as shown in the following figure) to be free from any mechanical stress. Measure its resonant frequency and resonant impedance by using a vector impedance analyzer or equivalent.

When the input frequency is swept within 100 Hz to 5 KHz, the resonant frequency is defined as the frequency where the impedance shows minimum value. This impedance should be the resonant impedance.

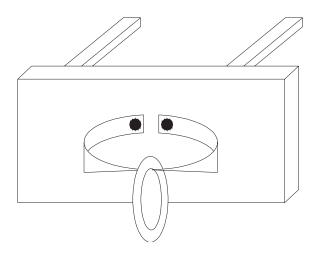

2) Static capacitance

The electrostatic capacitance should be measured at 120 Hz by using an L.C.R. meter (ex. HP4194A(H.P.)) or equivalent. The part should be clamped in the same way as the measurement or resonant frequency / resonant impedance mentioned above.

Mechanical Characteristics

Item	Test Condition	Evaluation Standard
Solderability	Stripped wires of lead wires are immersed in rosin for 5 seconds and then immersed in	90% min. of the stripped wires will be wet with solder.
	solder bath of 270 ±5°C for 3 ±0.5 seconds.	(Except the edge of the terminal)
Lead Wire Pull Strength	The horizontal force of 3.0N (0.306kg) should be applied to the double lead wire for 30 sec.	No damage or cutting off.
Vibration	The diaphragm should be measured after applying a vibration amplitude of 1.5 mm with 10 to 55 Hz band of vibration frequency to each of the 3 perpendicular directions for 2 hours.	The value of the resonant frequency should be $\pm 10\%$ of the initial measurements. Electrostatic capacitance should be $\pm 20\%$ compared with the initial measurement. The resonant impedance should be $\pm 2000\Omega$ max.



Description: piezo electric diaphragm

Date: 6/25/2007 Unit: mm

Page No: 3 of 4

Environment Test

Item	Test Condition	Evaluation Standard
High temp. test	After being placed in a chamber at +80°C for 240 hours.	
Low temp. test	After being placed in a chamber at -30°C for 240 hours.	The diaphragm will be measured after being placed at $+25^{\circ}\mathrm{C}$ for 4 hours. The value of the resonant frequency should be $\pm 10\%$, the value of the electro static capacitance should be $\pm 20\%$ compared to the initial measurements. The resonant impedance should be $2,000\Omega$ max.
Humidity test	After being placed in a chamber at +40°C and 90±5% relative humidity for 240 hours.	
Temp. cycle test	The part shall be subjected to 5 cycles. One cycle will consist of: +25 °C 0.5hr 0.5hr 0.25 0.5hr 0.5hr 0.5hr	
3hours		

Test Conditions

Standard Test Condition Judgement Test Condition a) Tempurature: +5 ~ +35°C

a) Tempurature: +25 ±2°C

b) Humidity: 45 - 85%

c) Pressure: 860-1060 mbar c) Pressure: 860-1060 mbar

b) Humidity: 60 - 70% c) Pressure: 860-1060 mba


Description: piezo electric diaphragm


Date: 6/25/2007

Unit: mm

Page No: 4 of 4

Packaging

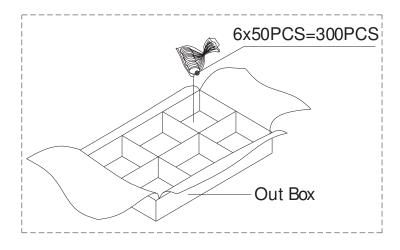

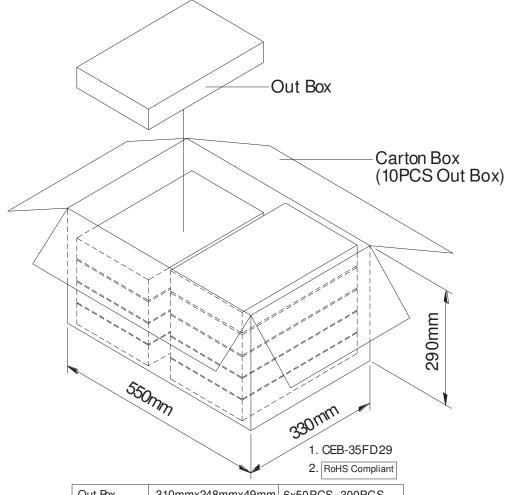

 Out Box
 310mmx248mmx49mm
 6x50PCS=300PCS

 Carton Box
 550mmx330mmx290mm
 300PCSx10=3,000PCS